

Instrument List					
	Bank LSB	Bank MSB	Prog	Full Name	Short Name
Piano					
1	0	121	0	German Grand	GermanPn
2	1	121	0	Japanese Grand	JapanPn
3	0	121	1	Bright German Grand	BrightPn
4	11	121	0	Warm Grand	WarmPn
5	0	121	2	Electric Grand	E.Grand
6	11	121	3	Honky Tonk	H.Tonk
Electric Piano					
7	0	121	4	Vintage EP	Vntge.EP
8	12	121	4	Warm EP	WarmEP
9	11	121	5	Reed EP	ReedEP
10	17	121	4	Dark EP	DarkEP
11	0	121	5	FM EP	FMEP
12	11	121	4	Crystal EP	CrystlEP
Keyboard					
13	0	121	7	Clavinet	Clavinet
14	0	121	6	Harpsichord	Harpsi
15	0	121	16	Tonewheel Organ	ToneWOrg
16	10	121	16	Classic Organ	ClassiOrg
17	1	121	19	Church Organ	ChurcOrg
18	11	121	21	Accordion	Accordn
Synth					
19	10	121	91	Synth Pad	SynthPad
20	0	121	48	Strings	Strings
21	16	121	91	Choir	Choir
22	15	121	80	Square Lead	Square
23	17	121	81	Saw Lead	SawLead
24	17	121	89	FM Pad	FM.Pad
Other					
25	11	121	102	Bell	Bell
26	0	121	8	Celesta	Celesta
27	11	121	24	Nylon Guitar	NylonGt
28	0	121	33	Electric Bass	E.Bass
29	0	121	32	Acoustic Bass	AcBass
30	11	121	39	Synth Bass	SyBass



Metronome / Rhythm List			
1	Simple Count	35	Funk 2
2	4/4 Beat	36	Swing 1
3	2/4 Beat	37	Swing 2
4	3/4 Beat	38	Funky Jazz
5	3/8 Beat	39	Bernard Shuffle
6	6/8 Beat	40	Bluegrass
7	5/4 Beat	41	Country Step
8	5/8 Beat	42	Country Folk
9	7/8 Beat	43	Bossa Nova
10	10/8 Beat	44	Latin
11	8Beat 1	45	Mambo
12	8Beat 2	46	Waltz
13	16Beat 1	47	Vienna Waltz
14	16Beat 2	48	Polka
15	Rock	49	March
16	Ska	50	6/8 March
17	Slow Rock		
18	70's Rock		
19	Texas Rock		
20	Sweet Ballad		
21	6/8 Soul		
22	Fusion Shuffle		
23	Adult Ballad		
24	Organic Ballad		
25	Tango		
26	Slow Waltz		
27	Cha Cha		
28	Rumba		
29	Samba		
30	Techno 1		
31	Hip Hop		
32	Techno 2		
33	Classic Disco		
34	Funk 1		

Song List					
1	Sonata No.17	35	Etude E Major	69	Reverie
2	Sonata No.14	36	Black Key	70	Cakewalk
3	Sonata No.8	37	Revolutionary	71	Arietta
4	Sonata No.25	38	Etude A-Flat	72	Butterfly
5	Sonata No.20	39	Etude F Minor	73	Neapolitan Song
6	Fur Elise	40	Nocturne B-Flat	74	Arabesques No.2
7	Menuett G-Dur 4	41	Nocturne E-Flat	75	Etudes G Minor
8	Prelude C Major	42	Nocturne F Minor	76	Gymnopedies
9	Prelude No.2	43	Impromptu A Flat	77	Je Te Veux
10	Gavotte No.5	44	Fantaisie-Improm	78	Fast Dance
11	Minuet G Major	45	Raindrop	79	Gypsy Rondo
12	Prelude C-Sharp	46	Preludes C Minor	80	Liebestraum
13	Prelude E Major	47	Waltz E-Flat	81	The Sapin
14	Prelude C Minor	48	Waltz C-Sharp	82	Lyric Rondo
15	Invention No.13	49	Minute Waltz	83	Humoresque
16	Invention No.1	50	Mazurkas F Major	84	La Priere
17	Sonata K.545 1st	51	Sweet Remember	85	To A Wild Rose
18	Sonata K.333 1st	52	May Breezes	86	Fontaine, La
19	Sonata K.333 3rd	53	Spring Song	87	Blumenlied
20	Rondo alla Turca	54	Venetianisches	88	Le Coucou
21	Ah, Vous Dirai-je	55	Lost Illusions	89	Minuet
22	Perpetuum Mobile	56	Barcarolle	90	Warblings
23	Impromptu	57	Christmas	91	Gavotte
24	Moments Musicaux	58	Autumn Song	92	Dance Steps
25	Serenade	59	Traumerei	93	Salut D' Amour
26	Arabesque	60	The Happy Farmer	94	Le Cygne
27	La Chevaleresque	61	May, Sweet May	95	Paloma, La
28	Tarentelle	62	Winter Time I	96	Rialto Ripples
29	La Gracieuse	63	Intermezzo	97	Le courant limpide
30	Sonatina Op.36-1	64	Brahms Waltz	98	Maple Leaf Rag
31	Sonatina Op.36-2	65	Arabesques No.1	99	Entertainer
32	Sonatina Op.36-3	66	Clair De Lune	100	Peacherine
33	Sonatina Op.36-4	67	Perludes No.8		
34	Etude C Major	68	Doctor		

SP201 / SP201 PLUS

SLIM PIANO


Owner’s Manual

Connecting the APP “Piano Toolbox”
via Bluetooth MIDI
SP201 PLUS only

1. Turn on the instrument. Make sure the instrument and the smart device are in range of each other.
2. On the smart device, open “Settings”, then turn on Bluetooth.
3. Open Bluetooth MIDI function within the app and select the device name “MEDELI SP201 Plus MIDI xxxx” to establish Bluetooth connection. When the connection is established, the LED light of power button will turn to blue.

Now, you can control the instrument from the app remotely.

Note:
You can use a keyboard command to disconnect Bluetooth MIDI, holding SHIFT and press A#0 and B0 at the same time.
Bluetooth MIDI only applies to the Bluetooth-equipped instruments.
But you can also connect the app through camera connection kit on iOS and through USB on Android devices.

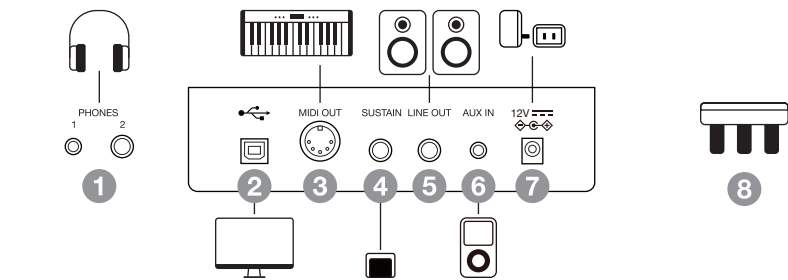

1. **PHONE Jacks**

For connecting to headphones. When headphones are connected, the internal speakers will be muted. The sound can only be heard from the headphones.
2. **USB Jack**

For connecting to a computer or a mobile device via cable. An additional adapter may be needed to connect to mobile devices.
3. **MIDI OUT Jack**

For connecting to an external MIDI device.
4. **SUSTAIN Jack**

For connecting to a sustain pedal.
5. **LINE OUT Jack**

For connecting to the INPUT jack of external audio equipment such as a stereo sound system.
6. **AUX IN Jack**

For connecting to the OUTPUT jack of external audio source such as an MP3 player.
7. **DC IN Jack**

For connecting the specified power adapter.
8. **Unit Pedal Jack (Optional)**

For connecting an optional unit pedal (Soft Pedal, Sostenuto Pedal and Sustain Pedal) to the pedal jack located on the bottom of the instrument.

