 


Electronic Keyboard

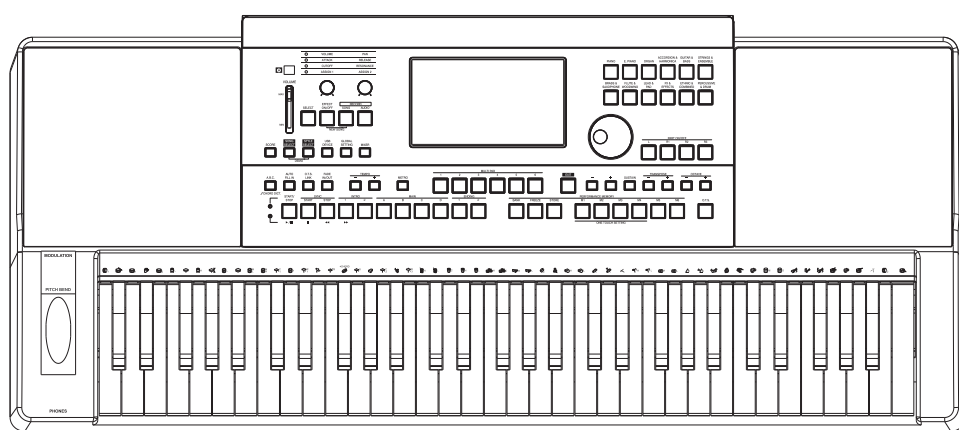

Quick Start Guide



INFORMATION FOR YOUR SAFETY!

THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

Regarding the display

This instrument display is a precision device created using extremely high technology, and careful attention has been paid to its product quality. Although you may notice some of the issues listed below, please be aware that these are due to the characteristics of LCD displays, and are not malfunctions.

- There may be pixels in the display that are always dark (unlit) or always bright (lit).
- Depending on the displayed content, the brightness of the display may appear uneven.
- Depending on the displayed content, horizontal stripes of shading may be visible.
- Depending on the displayed content, flickering or moire patterns may be visible.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated AC adaptor to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the AC power adaptor when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

Clean only with a soft, dry cloth.
Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into the instrument. If this happens, unplug the AC adaptor from the wall outlet. Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

Contents

Introduction

Panel & Display Description

Front Panel.....	4
Rear Panel.....	5
Main Display.....	6

Setup

Power Supply.....	7
Setting a Music Stand.....	7
Connecting a Footswitch.....	7
Connecting a Volume Pedal.....	7

Connections

Connecting a pair of Headphones.....	8
Connecting an Audio Equipment.....	8
Connecting an MP3/CD Player.....	8
Connecting a Computer.....	9
Connecting external MIDI devices.....	9

Quick Start

Basic Operations

Selection Operation.....	10
Soft Keyboard Operation.....	10
Setting Operation.....	11

Playing the Demos.....	12
-------------------------------	-----------

Playing Voices	13
-----------------------------	-----------

Playing with a Style.....	14
----------------------------------	-----------

Playing Songs.....	15
---------------------------	-----------

Recording Your Performance to MIDI.....	16
--	-----------

Recording Your Performance as Audio...17	
---	--

Using a USB Storage Device.....	18
--	-----------

Appendices

Troubleshooting.....	19
-----------------------------	-----------


Specification.....	19
---------------------------	-----------

Appendices

Voice List.....	20
Style List.....	26
Song List.....	29
Demo List.....	29
Chord List.....	30
MIDI Implementation List.....	31

Panel & Display Description

 Front Panel

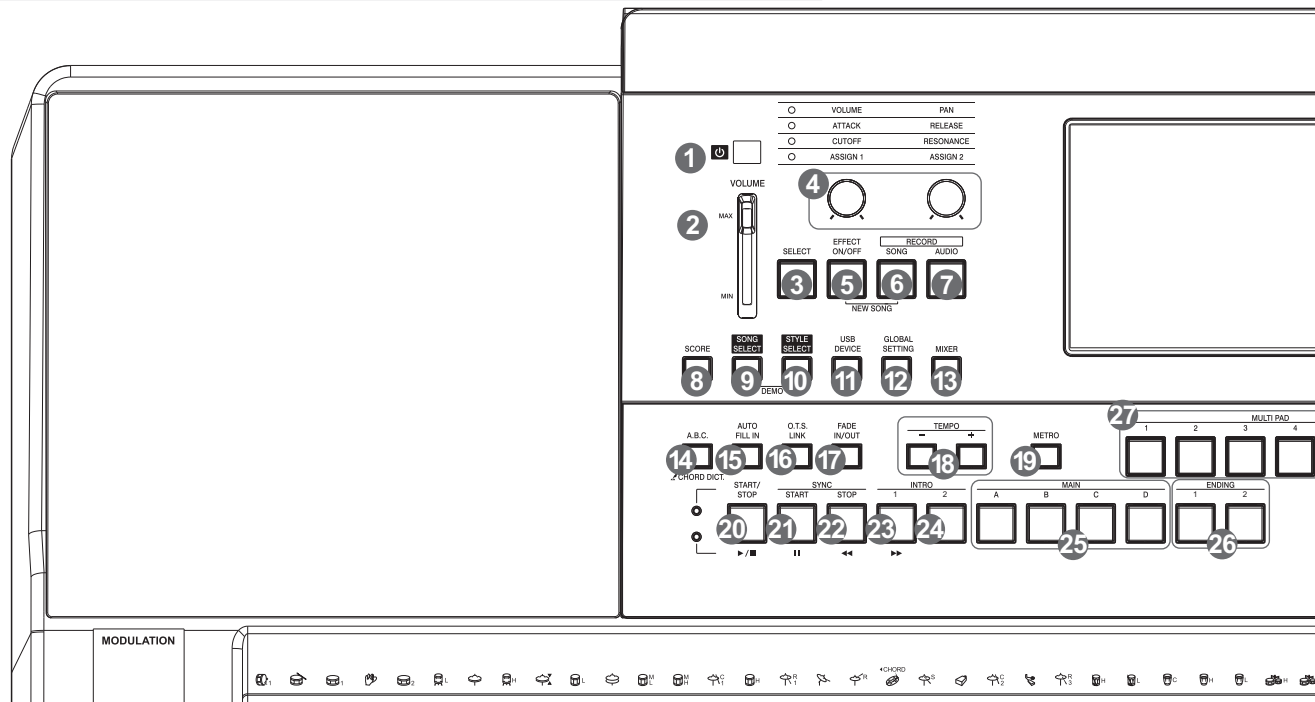

1. POWER ON/OFF BUTTON

Turn the power on or off.

2. MASTER VOLUME SLIDER

Adjust the master volume.

3. SELECT BUTTON

Select the four effect combinations of GROUP KNOBS sequentially.

4. GROUP KNOBS

Effect1: Adjust volume, pan of the current part(R1/R2/R3/L).

Effect2: Adjust attack time, release time of the current part (R1/R2/R3/L).

Effect3: Adjust the filter cutoff frequency, the amount of resonance applied at the filter cutoff frequency of the current part(R1/R2/R3/L).

Effect4: The knob effect can be assigned separately. See "Controller".

5. EFFECT ON/OFF BUTTON

Turn the special effect such as arpeggio, harmony, or chopper on or off.

6. RECORD SONG BUTTON

Enter the RECORD SONG interface. You'll record your performance in SMF format.

7. RECORD AUDIO BUTTON

Enter the audio recording is in ready state. You'll record your performance in WAV format.

8. SCORE BUTTON

Show the staff of the current song (SMF).

9. SONG SELECT BUTTON

Enter the SONG SELECT interface.

10. STYLE SELECT BUTTON

Enter the STYLE SELECT interface.

11. USB DEVICE BUTTON

Enter the USB DEVICE interface.

12. GLOBAL SETTING BUTTON

Enter the GLOBAL SETTING interface.

13. MIXER BUTTON

Enter the MIXER interface.

14. A.B.C. BUTTON

Turn the A.B.C. MODE on or off.

15. AUTO FILL IN BUTTON

Turn the AUTO FILL IN on or off.

16. O.T.S. LINK BUTTON

Turn the O.T.S. LINK on or off. If it is turned on, the One Touch Settings can be changed when you select different style.

17. FADE IN/OUT BUTTON

Turn the FADE IN or OUT on or off.

18. TEMPO +, TEMPO – BUTTONS

Adjust the current tempo.

19. METRO. BUTTON

Turn the Metronome on or off.

SONG CONTROL

20. PLAY/STOP BUTTON

Start playing the song or stop the song playback.

21. PAUSE BUTTON

Pause the song playback.

22. RW BUTTON

Rewind the song.

23. FF BUTTON

Fast forward the song.

STYLE CONTROL

20. START/STOP BUTTON

Start or stop playing the style.

21. SYNC. START BUTTON

Turn the SYNC. START on or off.

22. SYNC. STOP BUTTON

Turn the SYNC. STOP on or off.

23. INTRO 1 BUTTON

Play the intro 1.

24. INTRO 2 BUTTON

Play the intro 2.

 
25. MAIN A, B, C, D BUTTONS

Play the main part.

26. ENDING 1, 2 BUTTONS

Play the ending.

Panel & Display Description

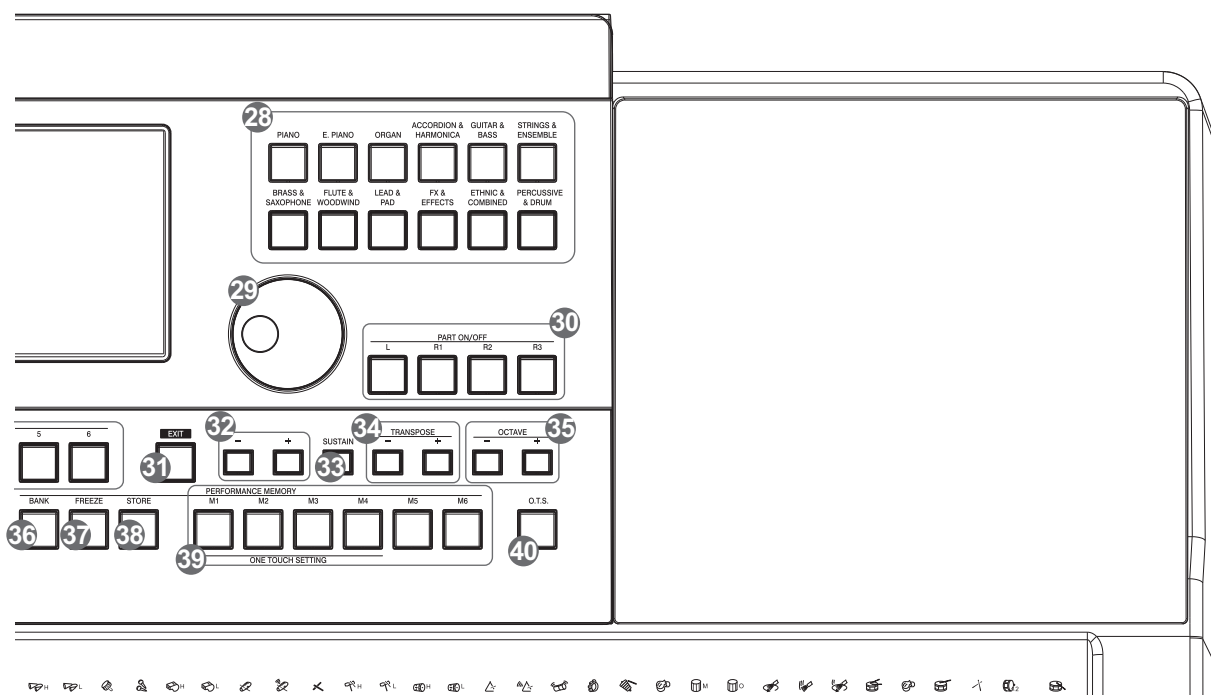

27. MULTI PAD BUTTONS

Add spice to your performance with special dynamic phrases by pressing them.

28. VOICE BUTTONS

Enter the VOICE SELECT interface. You'll select a voice category.

29. DATA DIAL

Change the value of current selection.

30. PART ON/OFF BUTTONS

Turn LEFT, RIGHT1, RIGHT2, RIGHT3 on or off individually.

31. EXIT BUTTON

Exit the current interface and return to the previous display.

32. +, - BUTTONS

Increase and decrease the value by 1.

33. SUSTAIN BUTTON

Turn the sustain effect on or off.

34. TRANSPOSE+, TRANSPOSE- BUTTONS

Adjust the TRANSPOSE value.

35. OCTAVE+, OCTAVE- BUTTONS

Adjust the OCTAVE value.

36. BANK BUTTON

Select a performance memory bank.

37. FREEZE BUTTON

Turn the FREEZE function on or off.

38. STORE BUTTON

Save the panel setups to one of the performance memories.

39. M1-M6 BUTTONS

Recall the panel setups from one of the performance memories.

O.T.S. (M1-M4):

Call up all the settings (voice, effect, etc) that match the current style.

40. O.T.S. BUTTON

Switch to the O.T.S. function.

41. MODULATION BUTTON

Apply a vibrato effect.

42. PITCH BEND

Bend note up and down.

 
43. PHONES

Connect the headphones to the keyboard.

44. USB PORT

Connect the USB storage device.

Rear Panel

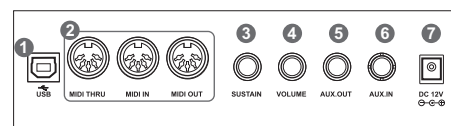

1. USB JACK

Connect to a computer.

2. MIDI IN/OUT/THRU JACKS

Connect other products equipped with a MIDI interface.

3. SUSTAIN JACK

Connect a sustain pedal.

4. VOLUME JACK

Connect a volume pedal.

5. AUX. OUT JACK

 
Connect to your amplifier/audio.

6. AUX. IN JACK

Connect any external audio source, such as an MP3 or CD player.

7. DC 12V

Connect DC 12V power adaptor. (Optional)

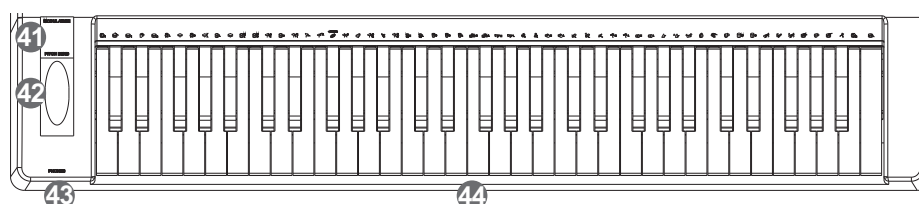

Panel & Display Description

Main Display



1. Voice

Display voice name and octave data of each part.

(Right1, Right2, Right3, Left)

How to select the voice for each part?

For example:

1. Pressing anywhere in the R1 display area makes the R1 part selected.
2. Pressing again will call up the Voice Selection display. Now, you can select the voice for R1.

2. Style&Song

Display the currently selected style name, for example "8Beat Ballad". Pressing this name will call up the Style Selection.

Pressing song tab will display the currently selected song name, for example "Brahms Waltz". Pressing this name will call up the Song Selection display.

3. Performance

Display the currently selected performance name.

Pressing this name will call up the Performance Selection display.

4. Chord

Display the chord name and related information.

- A. Chord Name
- B. Chord Mode
- C. Split

5. Shortcut to setup pages

- Pressing "Split Point" will call up the Split Setting quickly.
- Pressing "Effect" will call up the Effect Setting quickly.
- Pressing "Controllers" will call up the Controllers display quickly.

6. Others

- The amount of transposition in semitone units.
- Current tempo.
- Current playback position.
- Current time signature.

Setup

 
This section contains information about setting up your instrument and preparing to play. Please go through this section carefully before turning the power on.

Power Supply

1. Move the MASTER VOLUME slider downwards to set the minimum volume level.
2. Connect the AC/DC adaptor to the power supply jack.
3. Plug the AC/DC adaptor into an AC outlet.
4. Turn the power ON. The LCD on the panel will light up.


Note:

When the keyboard is not in use or in the time of thunderstorm, please disconnect the power for safety purpose.

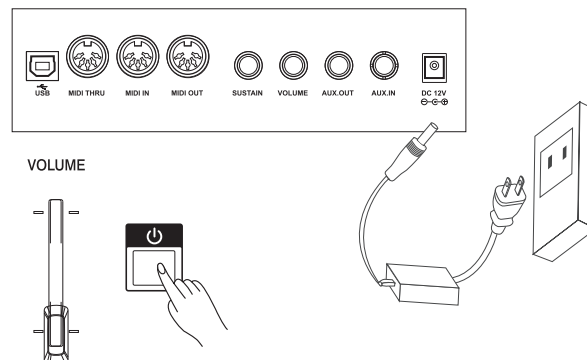


Setting a Music Stand

 The instrument is supplied with a music stand that can be attached to the instrument by inserting it into the slot at the rear of the panel.

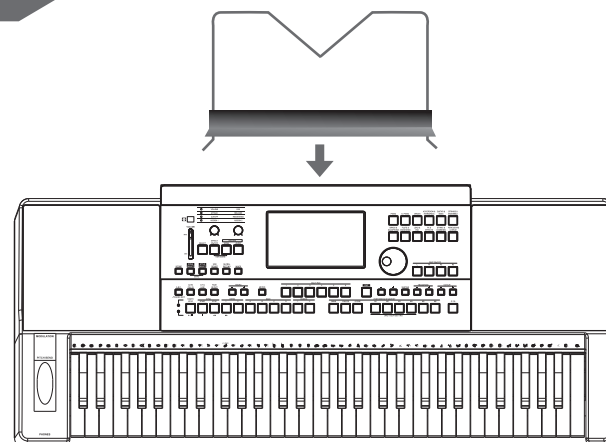


Connecting a Footswitch

 The sustain function lets you produce a natural sustain as you play by pressing a footswitch. Plug an optional footswitch into this jack and use it to switch sustain on or off.

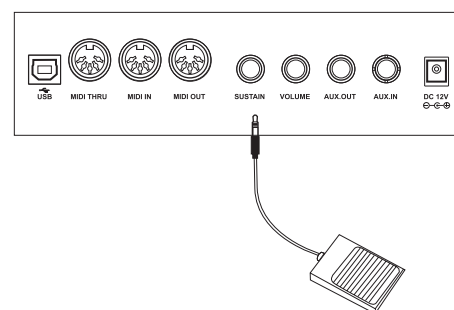

Connecting a Volume Pedal

 An optional volume control can be plugged into the volume jack for adjusting the volume of sound.

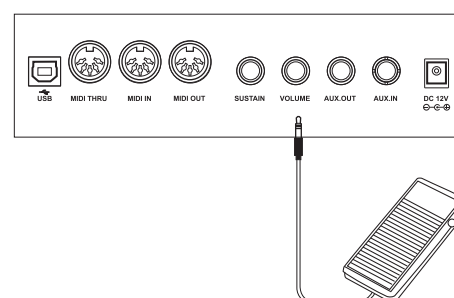


Connections

Connecting a pair of Headphones

When an optional pair of stereo headphones is connected with the headphones jack, the sound from speakers will switch off automatically resulting in only the sound from headphone to be heard for private practice or late-night playing.

Note:

 Do not listen with the headphones at high volume for long periods of time. Doing so may cause hearing loss.

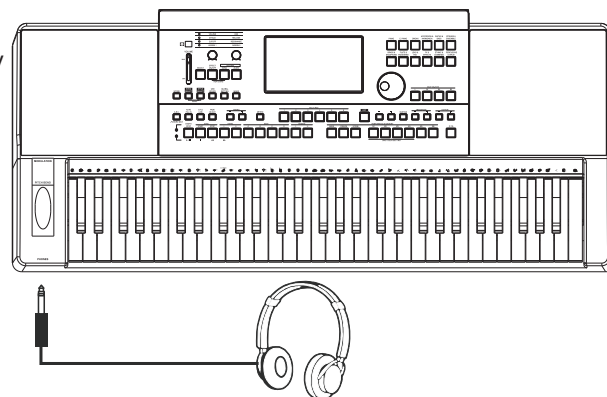


Connecting an Audio Equipment

Connect the rear-panel AUX.OUT jack to amplified speakers, amplifiers or domestic hi-fi units for external amplification.


Note:

 To avoid damaging the speakers, please ensure that the volume has been set to the minimum level before connecting the power and other devices.

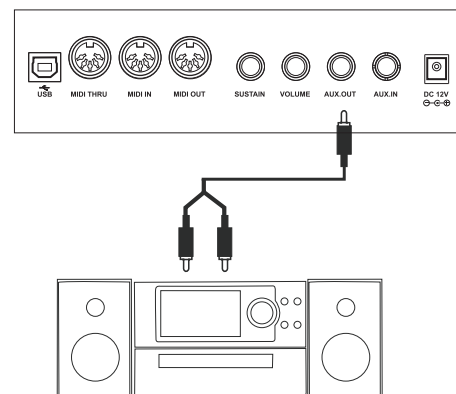

Connecting an MP3/CD Player

 Connect the audio output of an MP3/CD player or other audio source to the stereo AUX. IN jack on the rear panel. The input signal is mixed with the instrument signal, allowing you to play along.

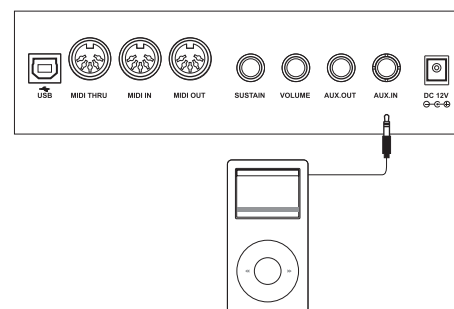

Connecting a Computer

You can simply connect the computer with USB cable via the USB connector.

You can use a commercially available MIDI interface to connect the keyboard to the computer via the MIDI connectors.

 
 
Note:

The default MIDI I/O device is USB, So please first set this device as MIDI, and then connect to the computer. (The setting operation see Global Setting-MIDI IN/OUT.)

After the driver is installed and initialization is finished, you can choose USB MIDI Keyboard in the device menu of the software to transfer MIDI data.

Note:

Do not select USB MIDI Keyboard in both of input and output settings together, otherwise the sound overlaps.

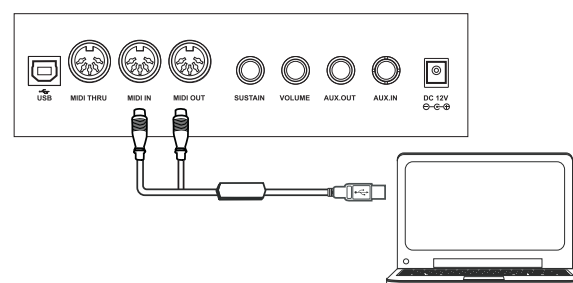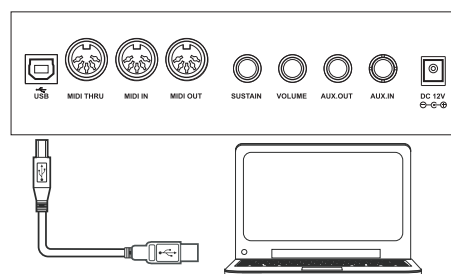

Connecting external MIDI devices

You can use standard MIDI cables to connect external MIDI devices.

MIDI IN: Receive MIDI message from an external MIDI device.

 
MIDI OUT: Transmits MIDI message generated by the instrument.

MIDI THRU: Simply relays the MIDI message received at MIDI IN.

Note:

To avoid damages, please be sure to turn off the power switches before you disconnect the related devices from the keyboard.

The default MIDI I/O device is USB, So please first set this device as MIDI, and then connect to the external MIDI device. (The setting operation see Global Setting-MIDI IN/OUT.)

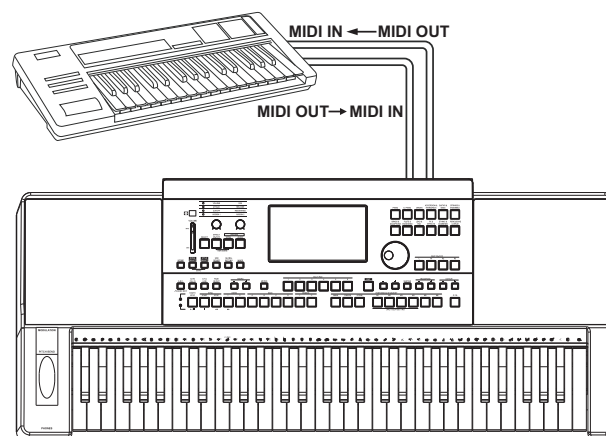

Basic Operations

Selection Operation

There are some selection interfaces: voice selection, style selection, song selection, performance selection, etc.
How to select the file in these selection interfaces?

For example:

1. Location of data

Preset: Location where pre-programmed (preset) data is stored.

User: Location where recorded or edited data is saved.

USB: Location where data on USB storage device is saved.

2. Category of data

 
The files are divided into categories according to their types. The categorization will be selected by pressing this categorization name on LCD. For example: The voice file (Grand Piano) is in the Piano categorization. Pressing "Piano" will select the Piano categorization.

3. Flip and File Browsing

If there are too many files in one category, the files will be on paging show. You can select your desired page by pressing the cursor button on LCD.

4. File Selecting

Select the desired file by pressing the file name on the current page.

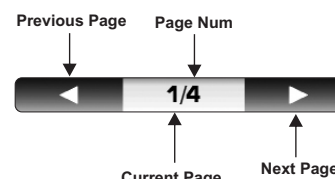

Using the Soft Keyboard

When you name or rename a file or a folder, you should call up soft keyboard display.

1. Deleting characters:

Press the delete button.

2. Moving the cursor:

Press the right or left cursor button.

3. Entering capital characters:

Press the CAPS button, the capital characters will be displayed.

4. Entering space:

Press the space button.

 
5. Entering numbers or marks:

Press the numbers button, the numbers and marks will be displayed.

Enter the number or mark by pressing its button.

Press the OK button to actually enter the new name and return to the previous display.


Press the CANCEL button to cancel operations and return to the previous display.

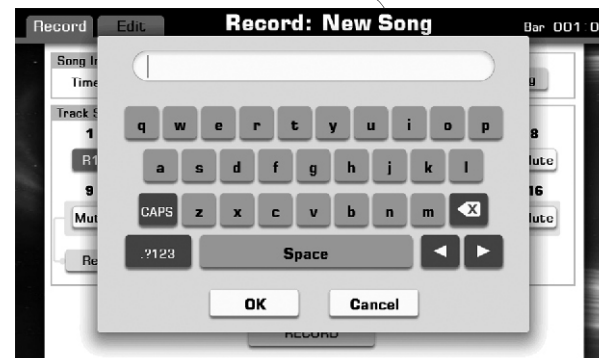


Setting Operation

There are three types on parameter setting.

 - 1. ON/OFF** (as in the picture: ☒ On)
Press this "ON" button to switch the keyboard touch response ON or OFF.

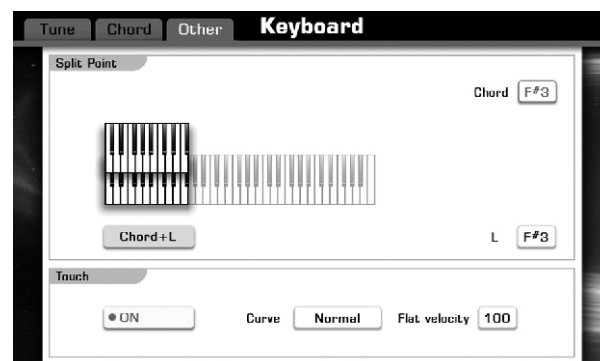


 
- 2. LIST** (as in the picture: Curve)
Press this "Normal" button, all available parameters would be listed.
You can choose any one of 3 ways below:
1. Press your desired parameter on LCD to select it.
2. Use the DATA DIAL to select your desired parameter.
3. Press the [+] or [-] button to select your desired parameter.

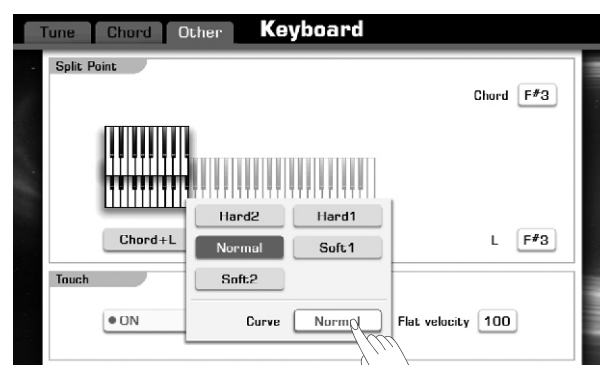

The selected parameter will be highlighted.



 
 
- 3. DATA** (as in the picture: Flat velocity)
Press this "100" button to display a pop-up box.
You can choose any one of 3 ways below:
1. Press the "+" or "-" button to adjust the data.
2. Use the DATA DIAL to adjust the data.
3. Press the [+] or [-] button to adjust the data.

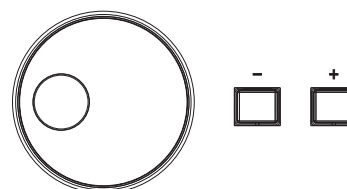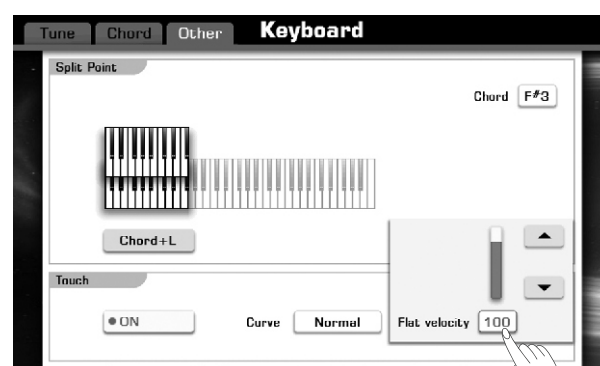

Playing the Demos

The instrument features 2 wonderful demos. Please refer to **DEMO LIST**.

  Press the [SONG SELECT] and [STYLE SELECT] buttons simultaneously to start playing the demo.

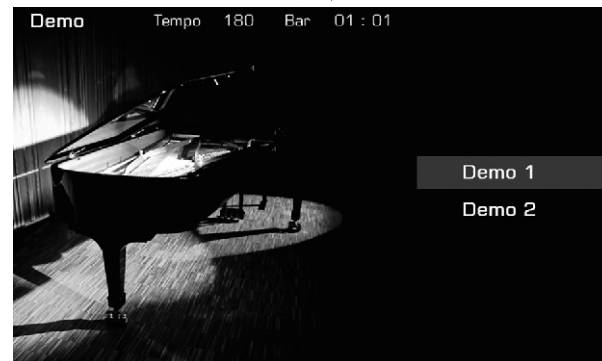

Select your desired demo

Press the Demo name on LCD or use the DATA DIAL, the [+] or the [-] button to select your desired demo.



Pause the demo

Press the [PAUSE] button to pause the demo playing or continue playing the demo.



 
Stop the demo

Press the [PLAY/STOP] button to stop the demo playback.



Adjust the tempo of the demo playback

Press the [TEMPO+] or [TEMPO-] button to adjust the tempo of the playback demo.



Exit the demo

Press the [EXIT] button to stop the demo playback and return to the main display.



 
Playing Voices

The instrument features exceptionally realistic 672 voices(Including 256 GM2 instrument voices and 15 drum kits), including piano, guitar, strings, brass and many more. Please refer to **Voice List**.

Turn the R1 PART on


Press the PART ON/OFF [RIGHT 1] button to turn the R1 part on.

You can play different voices simultaneously or play different voices with the left and right hands. First, turn on the corresponding part.

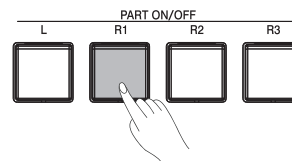

Select a Voice for R1 PART

 - There are 2 methods to select the voice category.
 - Press one of the VOICE buttons to select a voice category and call up the Voice Selection display.
 - Press the R1 display area on Main Display to call up the Voice Selection display. Press one of the voice categories NAME on the Voice Selection display.
- Press the cursor button on LCD to select your desired voice page.
- Press the voice NAME to select the desired voice on the current page display.

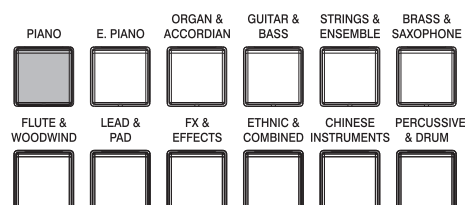

You can also select the user voice, details see **Voice**.

 


Play the Voice Demo


Press the "Voice Demo" on the Voice Selection display to start the demo for the selected voice. Press the "Voice Demo" again to stop it.

Note:

If there isn't voice demo for the selected voice, "Voice Demo" will not be displayed.

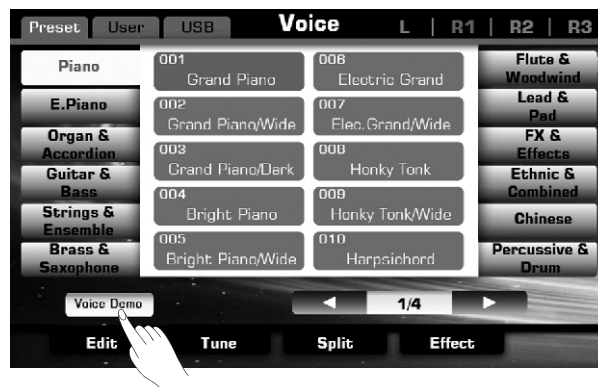

 Play the keyboard and listen to the selected voice.

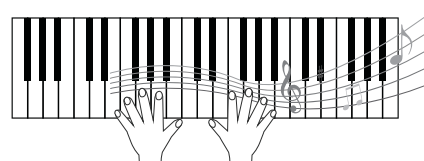


Playing with a Style

The instrument features 240 styles in a variety of different musical genres. Try selecting some of the different styles (Refer to **Style List**) and play with the auto accompaniment.

Select a Style


- There are 2 methods to call up the Style Selection display.
 - Press the [STYLE SELECT] button.
 - Press STYLE Name on the Main Display.
- Press one of the style categories NAME on the Style Selection display to select the style category.
- Press the cursor button on LCD to select your desired style page.
- Press the style NAME to select the desired style on the current page display.

 You can also select the user style, details see **Style**.

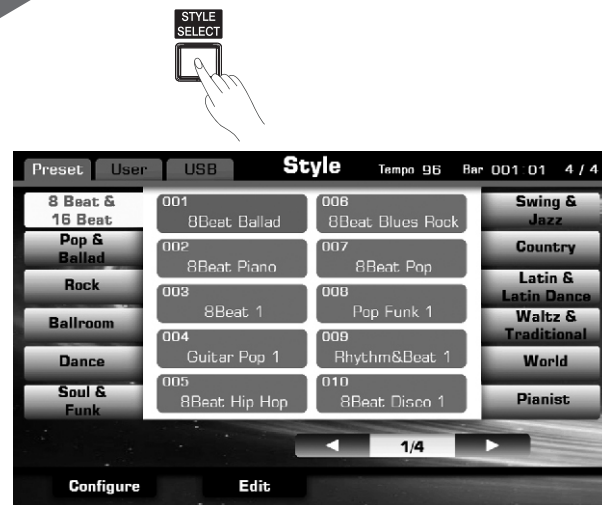

Start a Style

 - Press the [A.B.C.] button, the specified left-hand section of the keyboard becomes the “Auto Accompaniment” section, and chords played in this section are automatically detected and used as a basis for fully automatic accompaniment with the selected style.
- Press the [SYNC START] button to set Auto Accompaniment to standby—letting you simultaneously start the accompaniment as soon as you start playing.
- As soon as you play a chord with your left hand, the accompaniment starts.
- Press the [START/STOP] button to stop the accompaniment.

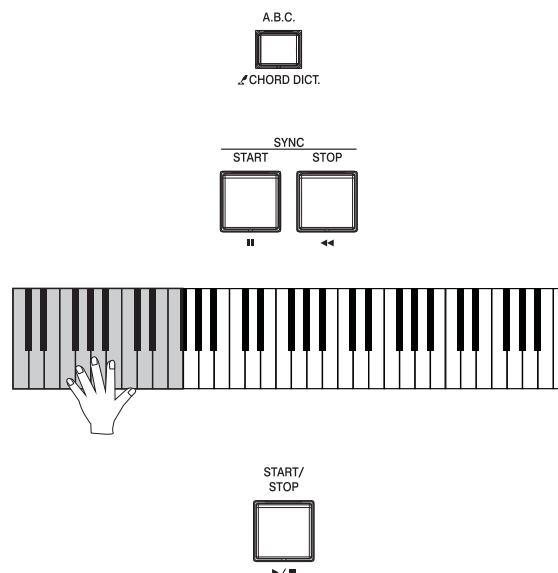

Playing Songs

 
The instrument features 90 songs.

Select a Song

1. There are 2 methods to call up the Song Selection display.
 - Press the [SONG SELECT] button.
 - Press Song Name on the Main Display.
2. Press the song NAME to select the desired song on the current page display.







You can also select the user song, details see **Song**.

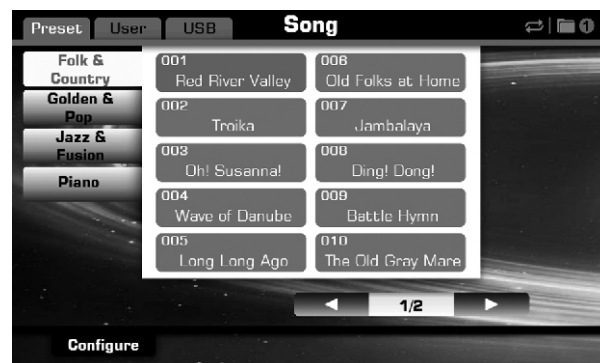


Playback a Song

    1. Press the [PLAY/STOP] button to start playback the selected song.
The LED of [PLAY/STOP] will light up.
2. Press the [PAUSE] button to pause the playing song, Press the [PAUSE] button again to continue it.
3. Press the [PLAY/STOP] button to stop the playing song.

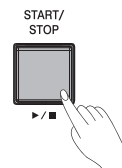


Record Your Performance to MIDI

 
1. Press the [RECORD SONG] and [EFFECT ON/OFF] buttons simultaneously to call up the Recording Display. A blank song ("New Song") is called up for recording. The LED of [RECORD SONG] is flashing that means it is in the recording standby mode.

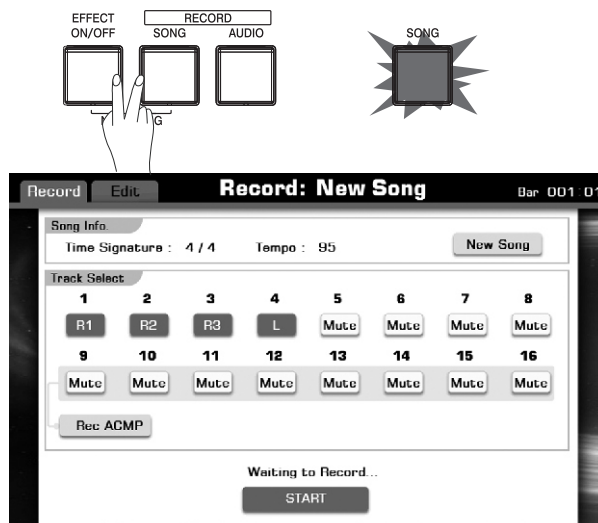

 
2. Press the [PLAY/STOP] button or play the keyboard to start recording. The LED of [RECORD SONG] will light up.

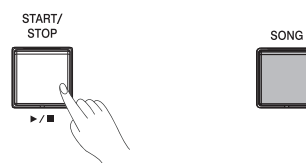

 3. Press the "STOP" button on the Recording Display or press the [RECORD SONG] button to stop recording and call up soft keyboard display. The LED of [RECORD SONG] will be turned off.

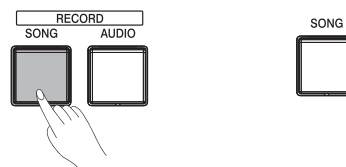


 4. Enter the new name and press "OK" to save the new user song.

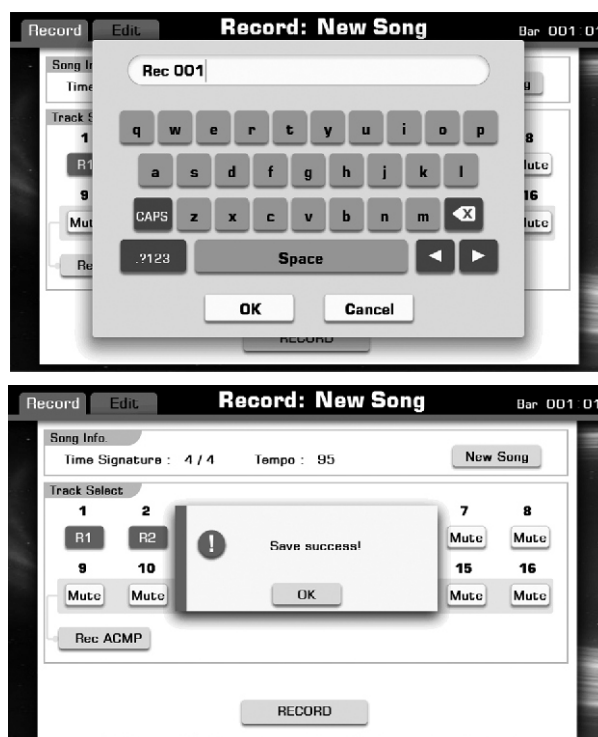

5. Press the [PLAY/STOP] button to playback the recorded user song.

 
If you want to record R1, R2, R3, L simultaneously or record melody and accompaniment simultaneously, you may refer to **MIDI RECORDING** for details.

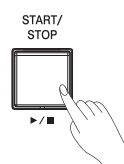

Recording Your Performance as Audio

You can record your performance as CD quality audio file to a USB device.

 
1. Please connect your USB storage device drive to the keyboard.
2. Press the [RECORD AUDIO] button to start recording your performance. The LED of [RECORD AUDIO] will light up.
3. Press the [RECORD AUDIO] button again to stop recording your performance and call up soft keyboard display. The LED of [RECORD AUDIO] will be turned off.

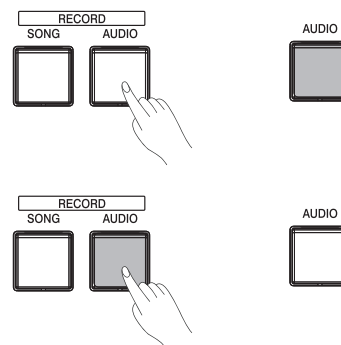

3. Enter the name and press "OK" to save the audio file you just recorded.



 4. Press the [PLAY/STOP] button to play the recorded audio song.



For details see **Audio Recording**.

Using a USB Storage Device

 
By connecting a USB storage device to your instrument, you can save data you've created to the connected device, as well as read data from the connected device.

Compatible USB device

Recommended Brand: KINGSTON, SANDISK, SONY, LEXAR, TRANSCEND

Format: FAT 16/32

Capacity: 1G,2G,4G,8G,16G,32G

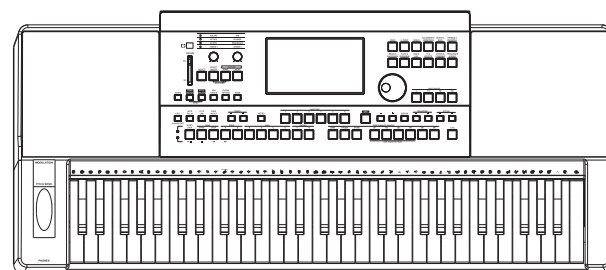


USB
DEVICE



Using the USB device

1. Connect the USB storage device to the USB port.
2. Press the [USB DEVICE] button to display the folders and files under the root directory of USB device.

 Press the USB tab on each selection display (such as voice, style, song, performance), enter the relevant folder directly, and save, rename or delete the user files from USB device.

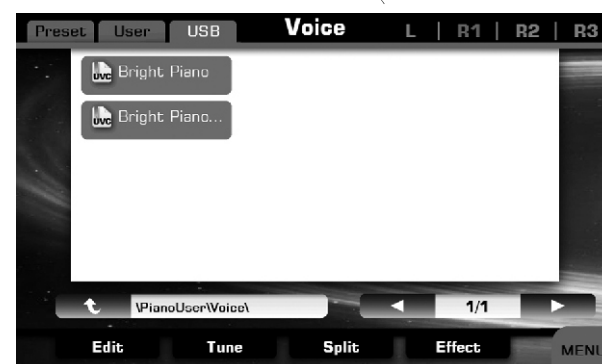

Note

If you save your files to your USB storage device in file selection displays (like VOICE Selection or Song Selection), the files would be saved into folder "PianoUser" in the root directory of your USB storage device.



Troubleshooting

Problem	Possible Cause and Solution
The speakers produce a “pop” sound whenever the power is turned ON or OFF.	This is normal and is no cause for alarm.
No sound when the keyboard is played.	The R1/R2/R3/L voice volume (Mixer) settings could be set too low. Make sure the voice volumes are set at appropriate levels.
When using a mobile phone, noise is produced.	Using a mobile phone in close proximity to the instrument may produce interference. To prevent this, turn off the mobile phone or use it further away from the instrument.
The auto accompaniment does not play back even Sync is in standby condition and a key is pressed.	You may be trying to start accompaniment by playing a key in the right-hand range of the keyboard. To start the accompaniment with Sync Start, make sure to play a key in the left-hand range of the keyboard.
Certain notes sound at wrong pitch.	Make sure that the Master Tune is set to “440.1hz” and turn off the Scale Tune.
The Harmony function does not operate.	Harmony cannot be turned on when the Full Keyboard fingering mode is selected. And Harmony cannot be turned on when a drum kit is selected for the voice R1.

Specification

Keyboard

61 Keys with touch response

Display

7" TFT, 800 x 480 color touch screen

Polyphony

128

Voice

672(Including 256 GM2 instrument voices and 15 drum kits)

Effect

Reverb, Chorus, Master EQ, Arpeggio, Harmony, Chopper

Style

240

Style Control

STYLE SELECT, START/STOP, SYNC STOP, SYNC START, INTRO 1, INTRO 2, MAIN A, MAIN B, MAIN C, MAIN D, ENDING 1, ENDING 2, A.B.C., AUTO FILL IN, O.T.S. LINK, FADE IN/OUT

Song

90 Preset Songs

Song Control

SONG SELECT, PLAY/STOP, PAUSE, RW, FF

SCORE

Display the Music Notation

Record

MIDI Recorder and USB Audio Recorder

Demo

2

Tempo

30-280, Tap Tempo

Performance Memory

10(BANK)*6(M1-M6), FREEZE, STORE

Multi Pad

6

Other Control

MASTER VOLUME SLIDER, SELECT, 2 KNOBS, EFFECT ON/OFF, GLOBAL SETTING, MIXER, VOICE DIRECT BUTTONS, DATA DIAL, +, -, PART ON/OFF BUTTONS, EXIT, SUSTAIN, TRANSPOSE+, TRANSPOSE-, OCTAVE+, OCTAVE-, O.T.S., MODULATION, PITCH BEND, MASTER TUNE, SCALE TUNE, METRONOME

USB Device

Save the user data (Ex: User voices, User Song, User Memory, etc.)

Play the User Song (Format: SMF/WAV/MP3/WMA)

Connectors

DC IN, Headphones, AUX. IN, AUX. OUT, Sustain Pedal, Volume Pedal, USB, MIDI IN, MIDI OUT, MIDI THRU, USB PORT.

Power Supply

DC 12V

Speaker

15W+15W, 25W+25W

Dimensions

970(W)X390(D)X160(H)mm

Weight

9Kg

* All specifications and appearances are subject to change without notice.

Voice List

No.	Full Name	LCD Name
Piano		
1	Acoustic Grand Piano	Grand Piano
2	Acoustic Grand Piano (wide)	Grand Piano/Wide
3	Acoustic Grand Piano (dark)	Grand Piano/Dark
4	Bright Acoustic Piano	Bright Piano
5	Bright Acoustic Piano (wide)	Bright Piano/Wide
6	Electric Grand Piano	Electric Grand
7	Electric Grand Piano (wide)	Elec.Grand/Wide
8	Honky Tonk Piano	Honky Tonk
9	Honky Tonk Piano (wide)	Honky Tonk/Wide
10	Harpsichord	Harpsichord
11	Harpsichord (octave mix)	Harpsichord/Octave
12	Harpsichord (wide)	Harpsichord/Wide
13	Acoustic Grand Piano (stereo)	Stereo Grand Piano
14	Octave Grand Piano 1	Octave Piano 1
15	Octave Grand Piano 2	Octave Piano 2
16	Piano & Strings 1	Piano&Strings 1
17	Piano & Pad 1	Piano&Pad 1
18	Piano & Choir 1	Piano&Choir 1
19	Piano & EP 1	Piano&EP 1
20	Piano & Vibraphone 1	Piano&&Vibra 1
21	Jazz Piano	Jazz Piano 1
22	Pop Piano	Pop Piano
23	Rock Piano	Rock Piano
24	Club Piano	Club Piano 1
25	Piano & Strings 2	Piano&Strings 2
26	Piano & Pad 2	Piano&Pad 2
27	Piano & Choir 2	Piano&Choir 2
28	Piano & EP 2	Piano&EP 2
29	Piano & Vibraphone 2	Piano&Vibra 2
30	Electric Grand Piano (dark)	Elec.Grand/Dark
31	Fusion Electric Grand Piano	Fusion Piano
32	Club Electric Grand Piano	Club Piano 2
33	Wah Electric Grand Piano	Wah Piano
34	Honky Tonk Piano (dark)	Honky Tonk/Dark
35	Honky Tonk Piano (stereo)	Honky Tonk/Stereo
36	Harpsichord (with key off)	Harpsichord/KeyOff
37	Harpsichord 2	Harpsichord 2
E. Piano		
38	Electric Piano 1	E.Piano 1
39	Electric Piano 2	E.Piano 2
40	Detuned Electric Piano 1	Detuned EP 1
41	Electric Piano 1 (velocity mix)	Velocity EP 1
42	60's Electric Piano	60's EP
43	Detuned Electric Piano 2	Detuned EP 2
44	Electric Piano 2 (velocity mix)	Velocity EP 2
45	EP Legend	EP Legend
46	Phase EP 1	Phase EP 1
47	Clavi	Clavi
48	Pulse Clavi	Pulse Clavi
49	Fusion Electric Piano	Fusion EP
50	Club Electric Piano	Club EP
51	Jazz Electric Piano	Jazz EP
52	Phase EP 2	Phase EP 2
53	Tremolo EP 1	Tremolo EP 1
54	Funk EP 1	Funk EP 1
55	Modern EP 1	Modern EP 1

56	Warm EP 1	Warm EP 1
57	Choir EP 1	Choir EP 1
58	Wah EP 1	Wah EP 1
59	EP & Strings 1	EP&Strings 1
60	Tremolo EP 2	Tremolo EP 2
61	Funk EP 2	Funk EP 2
62	Modern EP 2	Modern EP 2
63	Warm EP 2	Warm EP 2
64	Choir EP 2	Choir EP 2
65	Wah EP 2	Wah EP 2
66	EP & Strings 2	EP&Strings 2
67	Clavi 2	Clavi 2
68	Phase Clavi	Phase Clavi
69	Wah Clavi	Wah Clavi
70	E.Clavi	E.Clavi
Organ		
71	Drawbar Organ	Drawbar Organ
72	Detuned Drawbar Organ	Detuned DrawOrg
73	Italian 60's Organ	60's Organ
74	Drawbar Organ 2	Drawbar Organ 2
75	Percussive Organ	Percussive Organ
76	Detuned Percussive Organ	Detuned PercOrgan
77	Percussive Organ 2	Percussive Organ 2
78	Rock Organ	Rock Organ
79	Church Organ	Church Organ
80	Church Organ (octave mix)	ChurchOrg/Octave
81	Detuned Church Organ	Detune ChurchOrg
82	Reed Organ	Reed Organ
83	Soft Stereo Drawbar Organ	Soft St DrawOrg
84	Mellow Drawbar Organ	Mellow DrawOrg
85	Detuned Drawbar Organ 2	Detuned DrawOrg 2
86	Bright Drawbar Organ 1	Bright DrawOrg 1
87	Bright Drawbar Organ 2	Bright DrawOrg 2
88	70's Percussive Organ	70's PercOrgan
89	Light Click Organ 1	Light Click Org 1
90	Light Click Organ 2	Light Click Org 2
91	Detuned Percussive Organ 2	Detuned PercOrg 2
92	Stereo Rotary Organ	Stereo RotaryOrg
93	Rock Organ 2	Rock Organ 2
94	Rotary Organ 1	Rotary Organ 1
95	Rotary Organ 2	Rotary Organ 2
96	Slow Rotary Organ	Slow Rotary Organ
97	Church Organ 2	Church Organ 2
98	Detuned Church Organ 2	Detune ChurchOrg 2
99	Church Organ 3	Church Organ 3
100	Puff Organ	Puff Organ
Accordion & Harmonica		
101	Accordion	Accordion
102	Accordion 2	Accordion 2
103	Harmonica	Harmonica
104	Tango Accordion	Tango Accordion
105	Accordion 3	Accordion 3
106	Chorus Accordion	Chorus Accordion
107	Musette	Musette
108	Accord It Solo	Accord It Solo
109	Sweet Harmonica	Sweet Harmonica
110	Harmonica 2	Harmonica 2
111	Wah Harmonica	Wah Harmonica

Voice List

112	Tango Accordion 2	Tango Accordion 2
Guitar & Bass		
113	Acoustic Guitar (nylon)	Nylon Guitar
114	Ukulele	Ukulele
115	Acoustic Guitar (nylon + key off)	NylonGtr/KeyOff
116	Acoustic Guitar (nylon 2)	Nylon Guitar 2
117	Acoustic Guitar (steel)	Steel Guitar
118	12-Strings Guitar	12Strings Guitar
119	Mandolin	Mandolin
120	Steel Guitar with Body Sound	SteelGtr/BodySd
121	Electric Guitar (jazz)	Jazz Guitar
122	Electric Guitar (pedal steel)	Pedal Guitar
123	Electric Guitar (clean)	Clean Guitar
124	Electric Guitar (detuned clean)	Detuned CleanGtr
125	Mid Tone Guitar	Mid Tone Guitar
126	Electric Guitar (muted)	Muted Guitar
127	Electric Guitar (funky cutting)	Funk Guitar
128	Electric Guitar (muted velo-sw)	Velocity MutedGtr
129	Jazz Man	Jazz Man
130	Overdriven Guitar	OverdrivenGtr
131	Guitar Pinch	Guitar Pinch
132	Distortion Guitar	DistortionGtr 1
133	Distortion Guitar (with feedback)	Feedback Guitar
134	Distorted Rhythm Guitar	Rhythm DistGtr
135	Guitar Harmonics	Guitar Harmonics
136	Guitar Feedback	Feedback Guitar 3
137	Velocity Nylon Guitar	Velocity NylonGtr
138	Chorus Nylon Guitar	Chorus NylonGtr
139	Bright Nylon Guitar	Bright NylonGtr
140	Steel Guitar 2	Steel Guitar 2
141	Tremolo Steel Guitar 1	Tremolo SteelGtr 1
142	Tremolo Steel Guitar 2	Tremolo SteelGtr 2
143	Velocity Steel Guitar	Velocity SteelGtr
144	Mandolin 2	Mandolin 2
145	12-Strings Guitar 2	12Strings Guitar 2
146	Chorus Steel Guitar	Chorus SteelGtr
147	Nylon & Steel Guitar	Nylon&SteelGtr
148	Pedal Steel Guitar	Pedal Steel Guitar
149	Electric Guitar (jazz) 2	Jazz Guitar 2
150	Mellow Guitar	Mellow Guitar
151	Velocity Jazz Guitar	Velocity JazzGtr
152	Detuned Jazz Guitar	Detuned JazzGtr
153	Stereo Clean Guitar	Stereo CleanGtr
154	Velocity Clean Guitar	Velocity CleanGtr
155	Stereo Muted Guitar	Stereo MutedGtr
156	Overdriven Guitar 2	OverdrivenGtr 2
157	Distortion Guitar 2	DistortionGtr 2
158	Distortion Guitar (with feedback) 2	Feedback Guitar 2
159	5th Distortion	5th Distortion
160	Distortion Guitar Octave	Octave DistGtr
161	Stereo Distorted Guitar	Stereo DistGtr
162	Guitar Harmonics 2	Guitar Harmonics 2
163	Acoustic Bass	Acoustic Bass
164	Electric Bass (finger)	Finger Bass
165	Finger Slap Bass	Finger Slap Bass
166	Electric Bass (pick)	Pick Bass
167	Fretless Bass	Fretless Bass
168	Slap Bass 1	Slap Bass 1

169	Slap Bass 2	Slap Bass 2
170	Synth Bass 1	Synth Bass 1
171	Synth Bass 2	Synth Bass 2
172	Acoustic Bass 2	Acoustic Bass 2
173	Acoustic Bass 3	Acoustic Bass 3
174	Acoustic Bass Detuned	Detuned AcousBass
175	Acoustic Bass Filter	Filter AcousBass
176	Jazz Style	Jazz Style
177	Acoustic Bass & Mute Guitar	AcoBass&MuteGtr
178	Electric Bass (finger) 2	Finger Bass 2
179	Detuned Finger Bass	Detuned FngrBass
180	Dark Finger Bass	Dark Finger Bass
181	Finger Slap Bass 2	Finger Slap Bass 2
182	Resonant Finger Bass	Resonant FngrBass
183	Wah Finger Bass	Wah Finger Bass
184	Bass & Distorted Electric Guitar	Bass&DistortedGtr
185	Electric Bass (pick) 2	Pick Bass 2
186	Mute Pick Bass	Mute Pick Bass
187	Detuned Pick Bass	Detuned Pick Bass
188	Fretless Bass 2	Fretless Bass 2
189	90's Bass	90's Bass
190	Fretless Bass & Sine	Fretless&Sine
191	Fretless Bass Detuned 1	Detuned Fretless 1
192	Fretless Bass Detuned 2	Detuned Fretless 2
193	Fretless Bass Detuned 3	Detuned Fretless 3
194	Slap Bass 3	Slap Bass 3
195	Slap Bass 4	Slap Bass 4
196	Power Slap Bass	Power Slap Bass
197	Lash Thumb Bass	Lash Thumb Bass
198	Resonant Slap Bass	Resonant SlapBass
199	Wah Slap Bass 1	Wah Slap Bass 1
200	Velocity Switch Slap Bass	Velocity SlapBass
201	Wah Slap Bass 2	Wah Slap Bass 2
202	Synth Bass (warm)	Warm Synth Bass
203	Synth Bass 3 (resonance)	Resonance SynBass
204	Clavi Bass	Clavi Bass
205	Hammer	Hammer
206	Synth Bass 4 (attack)	Attack Bass
207	Synth Bass (rubber)	Rubber Bass
208	Attack Pulse	Attack Pulse
Strings & Strings Ensemble		
209	Violin	Violin
210	Violin (slow attack)	Slow Violin
211	Viola	Viola
212	Cello	Cello
213	Contrabass	Contrabass
214	Tremolo Strings	Tremolo Strings
215	Pizzicato Strings	PizzicatoStr
216	Orchestral Harp	Orchestral Harp
217	Yang Chin	Yang Chin
218	Timpani 1	Timpani 1
219	String Ensembles 1	String Ensembles 1
220	String Ensembles 2	String Ensembles 2
221	Strings & Brass	Strings&Brass
222	60's Strings	60's Strings
223	Synth Strings 1	Synth Strings 1
224	Synth Strings 2	Synth Strings 2
225	Synth Strings 3	Synth Strings 3

Voice List

226	Choir Aahs	Choir Aahs
227	Choir Aahs 2	Choir Aahs 2
228	Voice Oohs	Voice Oohs
229	Humming	Humming
230	Anlong Voice	Anlong Voice
231	Synth Voice	Synth Voice
232	Orchestra Hit	Orchestra Hit
233	The Violin	The Violin
234	Violin 2	Violin 2
235	Mono Violin	Mono Violin
236	Octave Violin	Octave Violin
237	Electric Violin	Electric Violin
238	Violin & Viola	Violin&Viola
239	Two Violin	Two Violin
240	Soft Violin	Soft Violin
241	Velocity Violin	Velocity Violin
242	Viola 2	Viola 2
243	Viola 3	Viola 3
244	Dark Viola	Dark Viola
245	Cello 2	Cello 2
246	Cello 3	Cello 3
247	Cello 4	Cello 4
248	Celloen 16'	Celloen 16'
249	Chamber Music	Chamber Music
250	Contrabass 2	Contrabass 2
251	Tremolo Strings 2	Tremolo Strings 2
252	Slow Tremolo Strings 1	Slow TremoloStr 1
253	Slow Tremolo Strings 2	Slow TremoloStr 2
254	Pizzicato Strings 2	PizzicatoStr 2
255	Octave Pizzicato	Octave Pizzicato
256	Orchestral Harp 2	Orchestral Harp 2
257	Yang Chin 2	Yang Chin 2
258	Africa 1	Africa 1
259	Africa 2	Africa 2
260	Timpani 2	Timpani 2
261	Stereo Slow Strings	Stereo SlowStr
262	Slow Strings	Slow Strings
263	Legato Strings	Legato Strings
264	Orchestra 1	Orchestra 1
265	Arco Strings	Arco Strings
266	Resonant Strings	Resonant Strings
267	The Strings	The Strings
268	70's Strings	70's Strings
269	Solo Strings	Solo Strings
270	Synth Strings 4	Synth Strings 4
271	Synth Strings 5	Synth Strings 5
272	Choir Aahs 3	Choir Aahs 3
273	Choir Aahs 4	Choir Aahs 4
274	Mellow Choir	Mellow Choir
275	Stereo Choir Aahs	Stereo Choir Aahs
276	Strings & Choir 1	Strings&Choir 1
277	Strings & Choir 2	Strings&Choir 2
278	Strings & Voice 1	Strings&Voice 1
279	Strings & Voice 2	Strings&Voice 2
280	Analog Voice	Analog Voice
281	Bass Hit Plus	Bass Hit Plus
282	6th Hit	6th Hit
283	Euro Hit	Euro Hit

284	Octave Orchestra Hit	Octave OrchHit
Brass & Saxophone		
285	Trumpet	Trumpet
286	Dark Trumpet Soft	DarkTrump Soft
287	Trombone	Trombone
288	Trombone 2	Trombone 2
289	Bright Trombone	Bright Trombone
290	Tuba	Tuba
291	Muted Trumpet	Muted Trumpet
292	Muted Trumpet 2	Muted Trumpet 2
293	French Horn	French Horn
294	French Horn 2 (warm)	French Horn 2
295	Brass Section	Brass Section
296	Brass Section 2 (octave mix)	Brass Section 2
297	Synth Brass 1	Synth Brass 1
298	Synth Brass 2	Synth Brass 2
299	Synth Brass 3	Synth Brass 3
300	Synth Brass 4	Synth Brass 4
301	Trumpet 2	Trumpet 2
302	Dark Trumpet Soft 2	DarkTrump Soft 2
303	Resonant Trumpet	Resonant Trumpet
304	Sweet Trumpet	Sweet Trumpet
305	Wah Trumpet	Wah Trumpet
306	Dark Trombone	Dark Trombone
307	Dark Trombone 2	Dark Trombone 2
308	Strings & Trombone	Strings&Tromb
309	Tuba 2	Tuba 2
310	Tuba 3	Tuba 3
311	Tuba Solo	Tuba Solo
312	Soft Tuba	Soft Tuba
313	Muted Trumpet 3	Muted Trumpet 3
314	French Horn 3	French Horn 3
315	French Horn 4	French Horn 4
316	Stereo French Horn	Stereo FrHorn
317	Fifth Horn Orchestra	Fifth HornOrch
318	Brass Section 3	Brass Section 3
319	Brass Section 4	Brass Section 4
320	Dark Brass 1	Dark Brass 1
321	Brassband	Brassband
322	Bright Brass Section	Bright Brass
323	Dark Brass 2	Dark Brass 2
324	Mute Brass Ensemble	Mute BrassEns
325	Sforzato Brass	Sforzato Brass
326	Brass & Strings	Brass&Strings 1
327	Analog Synth Brass 1	Analog SynBrass 1
328	Analog Synth Brass 2	Analog SynBrass 2
329	Jump Brass	Jump Brass
330	Octave Synth Brass	Octave SynBrass
331	Synth Brass & Strings 1	Brass&Strings 2
332	Synth Brass & Strings 2	Brass&Strings 3
333	Echo Brass	Echo Brass
334	Soprano Sax	Soprano Sax
335	Alto Sax	Alto Sax
336	Tenor Sax	Tenor Sax
337	Baritone Sax	Baritone Sax
338	Soprano Sax 2	Soprano Sax 2
339	Soprano Sax Soft	Soprano Sax Soft
340	Slow Soprano Sax	Slow Soprano Sax

100
95
75
25
5
0

Voice List

341	Sweet Soprano Sax	Sweet Soprano Sax
342	Alto Sax 2	Alto Sax 2
343	Soft Alto Sax	Soft Alto Sax
344	Super Alto Sax	Super Alto Sax
345	Sax Band	Sax Band
346	Tenor Sax 2	Tenor Sax 2
347	Baritone Sax 2	Baritone Sax 2
348	Soft Baritone Sax	Soft Baritone Sax
Flute & Woodwind		
349	Oboe	Oboe
350	English Horn	English Horn
351	Bassoon	Bassoon
352	Clarinet	Clarinet
353	Piccolo	Piccolo
354	Flute	Flute
355	Recorder	Recorder
356	Pan Flute	Pan Flute
357	Blown Bottle	Blown Bottle
358	Shakuhachi	Shakuhachi
359	Whistle	Whistle
360	Ocarina	Ocarina
361	Oboe 2	Oboe 2
362	Sweet Oboe	Sweet Oboe
363	English Horn 2	English Horn 2
364	Analog Horns	Analog Horns
365	Woodwinds	Woodwinds
366	Bassoon 2	Bassoon 2
367	Clarinet 2	Clarinet 2
368	Piccolo 2	Piccolo 2
369	Flute 2	Flute 2
370	Sweet Flute	Sweet Flute
371	Recorder 2	Recorder 2
372	Sweet Pan Flute	Sweet Pan Flute
373	Pan Flute 2	Pan Flute 2
374	Dark Pan Flute	Dark Pan Flute
375	Blown Bottle 2	Blown Bottle 2
376	Shakuhachi 2	Shakuhachi 2
377	Whistle 2	Whistle 2
378	Ocarina 2	Ocarina 2
Lead & Pad		
379	Lead 1 (square)	Square Lead
380	Lead 1a (square 2)	Square Lead 2
381	Lead 1b (sine)	Sine Lead
382	Lead 2 (sawtooth)	Sawtooth
383	Lead 2a (sawtooth 2)	Sawtooth 2
384	Lead 2b (saw + pulse)	Sawtooth&Pulse
385	Lead 2c (double sawtooth)	Double Sawtooth
386	Lead 2d (sequenced analog)	Sequenced analog
387	Lead 3 (calliope)	Calliope
388	Lead 4 (chiff)	Chiffer Lead
389	Lead 5 (charang)	Charang Lead
390	Lead 5a (wire lead)	Wire Lead
391	Lead 6 (voice)	Voice Lead
392	Lead 7 (fifths)	Fifths Lead
393	Lead 8 (bass + lead)	Bass&Lead
394	Lead 8a (soft wrl)	Soft wrl
395	Pad 1 (new age)	New age Pad
396	Pad 2 (warm)	Warm Pad

397	Pad 2a (sine pad)	Sine pad
398	Pad 3 (polysynth)	Poly Synth
399	Pad 4 (choir)	Choir Pad
400	Pad 4a (itopia)	Itopia Pad
401	Pad 5 (bowed)	Bowed Pad
402	Pad 6 (metallic)	Metallic Pad
403	Pad 7 (halo)	Halo Pad
404	Pad 8 (sweep)	Sweep Pad
405	Square	Square
406	Slow Square Lead	Slow Square Lead
407	Sine Solo	Sine Solo
408	Square Lead	Square Lead 3
409	Thick Square	Thick Square
410	Corrie	Corrie
411	Quint	Quint
412	2Oscillators Lead	2Oscillators Lead
413	Wavy Sawtooth	Wavy Sawtooth
414	Super Analog	Super Analog
415	Big Lead	Big Lead
416	Bauble Lead	Bauble Lead
417	PWM 4th	PWM 4th
418	PWM 4th Soft	PWM 4th Soft
419	Synth Calliope Soft	SynCalliope Soft
420	Chiffer Lead 2	Chiffer Lead 2
421	Chiffer Lead 3	Chiffer Lead 3
422	Charang 2	Charang 2
423	Wire Lead 2	Wire Lead 2
424	Charang 3	Charang 3
425	Soft Vox	Soft Vox
426	5th SawWave 2	5th SawWave
427	Fifth Lead Soft	Fifth Lead Soft
428	Fifth Lead	Fifth Lead 2
429	Massiness	Massiness
430	Delayed Lead 2	Delayed Lead 2
431	Delayed Lead 3	Delayed Lead 3
432	New Age Pad 2	New Age Pad 2
433	New Age Pad 3	New Age Pad 3
434	Slow Square	Slow Square
435	New Year Pad	New Year Pad
436	Warm Pad 2	Warm Pad 2
437	PWM Pad	PWM Pad
438	Warmly Pad	Warmly Pad
439	Horn Pad	Horn Pad
440	Poly Synth 2	Poly Synth 2
441	Click Pad	Click Pad
442	Analog Pad	Analog Pad
443	Poly Pad	Poly Pad
444	Poly Synth 3	Poly Synth 3
445	Space Voice	Space Voice
446	Bowed Pad 2	Bowed Pad 2
447	Bowed Pad 3	Bowed Pad 3
448	Metallic Pad 2	Metallic Pad 2
449	Pan Pad 1	Pan Pad 1
450	Pan Pad 2	Pan Pad 2
451	Halo Pad 2	Halo Pad 2
452	Halo Pad 3	Halo Pad 3
453	Sweep Pad 2	Sweep Pad 2
454	Dipolar Pad	Dipolar Pad

Voice List

455	Rising	Rising
456	Congregate	Congregate
FX & Effects		
457	FX 1 (rain)	FX 1 Rain
458	FX 2 (soundtrack)	FX 2 SoundTrack
459	Prelude	Prelude
460	FX 3 (crystal)	FX 3 Crystal
461	FX 3a (synth mallet)	Synth Mallet
462	Crystal 2	Crystal 2
463	FX 4 (atmosphere)	FX 4 Atmosphere
464	Warm Air	Warm Air
465	FX 5 (brightness)	FX 5 Brightness
466	Smog	Smog
467	FX 6 (goblins)	FX 6 Goblins
468	Goblin 2	Goblin 2
469	Choir Bell 1	Choir Bell 1
470	Choir Bell 2	Choir Bell 2
471	FX 7 (echoes)	FX 7 Echoes
472	FX 7a (echo bell)	Echo bell
473	FX 7b (echo pan)	Echo pan
474	Echo Drops 2	Echo Drops 2
475	Echo Bell 2	Echo Bell 2
476	FX 8 (sci-fi)	FX 8 Sci-Fi
477	Sci-Fi 2	Sci-Fi 2
478	Guitar Fret Noise	Guitar Fret Noise
479	Guitar Cutting Noise	Gtr Cutting Noise
480	Acoustic Bass String Slap	AcBass String Slap
481	Guitar Fret Noise 2	Gtr Fret Noise 2
482	Guitar Cutting Noise 2	Cutting Noise 2
483	Acoustic Bass String Slap 2	Bass String Slap 2
484	Breath Noise	Breath Noise
485	Flute Key Click	Flute Key Click
486	Breath Noise 2	Breath Noise 2
487	Flute Key Click 2	Flute Key Click 2
488	Seashore	Seashore
489	Rain	Rain
490	Thunder	Thunder
491	Wind	Wind
492	Stream	Stream
493	Bubble	Bubble
494	Seashore 2	Seashore 2
495	Bird Tweet	Bird Tweet
496	Dog	Dog
497	Horse Gallop	Horse Gallop
498	Bird Tweet 2	Bird Tweet 2
499	Sheep	Sheep
500	Telephone Ring	Telephone Ring
501	Telephone Ring 2	Telephone Ring 2
502	Door Creaking	Door Creaking
503	Door	Door
504	Scratch	Scratch
505	Wind Chime	Wind Chime
506	Helicopter	Helicopter
507	Car Engine	Car Engine
508	Car Stop	Car Stop
509	Car Pass	Car Pass
510	Car Crash	Car Crash
511	Siren	Siren

512	Train	Train
513	Jetplane	Jetplane
514	Starship	Starship
515	Burst Noise	Burst Noise
516	Applause	Applause
517	Laughing	Laughing
518	Screaming	Screaming
519	Punch	Punch
520	Heart Beat	Heart Beat
521	Footsteps	Footsteps
522	Gunshot	Gunshot
523	Machine Gun	Machine Gun
524	Lasergun	Lasergun
525	Explosion	Explosion
Ethnic & Combined		
526	Sitar	Sitar
527	Sitar 2 (bend)	Sitar 2/Bend
528	Sitar & Strings 1	Sitar&Strings 1
529	Sitar & Strings 2	Sitar&Strings 2
530	Banjo	Banjo
531	Banjo 2	Banjo 2
532	Shamisen	Shamisen
533	Shamisen 2	Shamisen 2
534	Koto	Koto
535	Taisho Koto	Taisho Koto
536	Koto 2	Koto 2
537	Taisho Koto 2	Taisho Koto 2
538	Kalimba	Kalimba
539	Kalimba 2	Kalimba 2
540	Bag Pipe	Bag Pipe
541	Bag pipe 2	Bag pipe 2
542	Fiddle	Fiddle
543	Fiddle 2	Fiddle 2
544	Shanai	Shanai
545	Shanai 2	Shanai 2
546	Stereo Piano & Strings	Piano&Strings
547	Stereo Piano & Calliope	Piano&Callio
548	Stereo Piano & Sweep	Piano&Sweep
549	Honky Tonk Piano & Fifths	Honk&Fifths
550	Honky Tonk Piano & Sweep	Honk&Sweep
551	FM Electric Piano	FM E.Piano
552	Digital Piano	Digital Piano
553	E.Piano & Pad	E.Piano&Pad
554	E.Piano & Sweep	E.Piano&Sweep
555	E.Piano 2 & Pad	E.Piano 2&Pad
556	E.Piano 2 & Sweep	E.Piano 2&Sweep
557	E.Piano 2 & Warm	E.Piano 2&Warm
558	Harpsichord & Stereo Strings	Harpsichord&StStr
559	Music Box & Stereo Strings	MusicBox&StStr
560	Vibraphone & Stereo Strings	Vibra&StStr
561	Vibraphone Octave	Vibraphone Octave
562	Vibraphone & Marimba & Kalimba	Vibra&Mar&Kal
563	Marimba & Kalimba	Marimba&Kalimba
564	Marimba Delay	Marimba Delay
565	Xylophone Octave	Xylophone Octave
566	Organ & Stereo Strings	Organ&StStrings
567	Stereo Organ & Piano	StereoOrg&Piano
568	Rock Organ & Strings	RockOrg&Strings

Voice List

569	Church Organ & Choir	ChurchOrg&Choir
570	Church Organ & Strings	ChurchOrg&Str
571	Harmonica & Acoustic Guitar	Harmonica&AcGtr
572	Harmonica & Strings	Harmonica&Str
573	Acoustic Guitar & Flute	AcGtr&Flute
574	Acoustic Guitar & Clavi	AcGtr&Clavi
575	24-Strings Guitar	24-Strings Guitar
576	24-Strings Guitar & Strings	24-StrGtr&Str
577	Steel Guitar & Warm Pad	SteelGtr&WarmPd
578	Stereo Strings & Horn	Strings&Horn
579	Orchestra 2	Orchestra 2
580	Full Strings 1	Full Strings 1
581	Full Strings 2	Full Strings 2
582	Symphonic	Symphonic
583	Stereo Choir & Strings	Choir&Str
584	Stereo Choir & Steel Guitar	Choir&SteelGtr
585	3Trumpets Loose	3Trumpets Loose
586	Trombone & Stereo Strings	Trombone&Str
587	3Trombones Loose	3Trombones Loose
588	3Muted Trumpets Loose	3MuteTrump Loose
589	Club Brass	Club Brass
590	Brass & Woodwinds	Brass&Wood
591	Woodwinds & Strings	Wood&Strings
592	Section Woods Small	Woods Small
593	Pan Flute & Strings Pad	PanFlute&StrPad
594	Koto & Shamisen	Koto&Shamisen
595	Koto & Shamisen & Strings	Koto&Sham&Str
Percussive & Drum		
596	Celesta	Celesta
597	Celesta 2	Celesta 2
598	Birght Celesta	Birght Celesta
599	Celesta & Sine	Celesta&Sine
600	Reecho Bell	Reecho Bell
601	Celesta & Music Box	Celes&MusicBox
602	Glockenspiel I	Glockenspiel I
603	Glockenspiel 2	Glockenspiel 2
604	Glockenspiel & Sine	Glockenspiel&Sine
605	Glockenspiel & Celesta	Glocken&Celes
606	Music Box	Music Box
607	Music Box 2	Music Box 2
608	Music Box 3	Music Box 3
609	Toy Box	Toy Box
610	Music Box & Harp	Music Box&Harp
611	Vibraphone	Vibraphone
612	Vibraphone (wide)	Vibraphone/Wide
613	Stereo Vibraphone	Stereo Vibraphone
614	Rigid Vibraphone	Rigid Vibraphone
615	Vibraphone 2	Vibraphone 2
616	Vibraphone 2 (wide)	Vibraphone/Wide 2
617	Vibraphone & Bell	Vibraphone&Bell
618	Vibraphone & Harpsichord	Vibra&Harpsic
619	Vibraphone & Strings 1	Vibra&Strings 1
620	Vibraphone & Strings 2	Vibra&Strings 2
621	Marimba	Marimba
622	Marimba (wide)	Marimba/Wide
623	Marimba 2	Marimba 2
624	SinMarimba	SinMarimba
625	Stereo Marimba	Stereo Marimba

626	Marimba & Vibraphone	Marimba&Vibra
627	Wood Drum	Wood Drum
628	Xylophone	Xylophone
629	Xylophone 2	Xylophone 2
630	Tubular Bells	Tubular Bells
631	Church Bell	Church Bell
632	Carillon	Carillon
633	Dulcimer	Dulcimer
634	Santur	Santur
635	Shorty	Shorty
636	Tinkle Bell	Tinkle Bell
637	Tinkle Bell 2	Tinkle Bell 2
638	Agogo	Agogo
639	Agogo 2	Agogo 2
640	Steel Drums	Steel Drums
641	Steel Drums 2	Steel Drums 2
642	Woodblock	Woodblock
643	Castanets	Castanets
644	Woodblock 2	Woodblock 2
645	Castanets 2	Castanets 2
646	Taiko Drum	Taiko Drum
647	Taiko Drum 2	Taiko Drum 2
648	ConcertBass Drum	ConBass Drum
649	ConcertBass Drum 2	ConBass Drum 2
650	Melodic Tom	Melodic Tom
651	Melodic Tom 2 (power)	Power Melodic Tom
652	Synth Drum	Synth Drum
653	Rhythm Box Tom	Rhythm Box Tom
654	Electric Drum	Electric Drum
655	Electric Drum 2	Electric Drum 2
656	Reverse Cymbal	Reverse Cymbal
657	Reverse Cymbal 2	Reverse Cymbal 2
658	Standard Set	Standard Set
659	Room Set	Room Set
660	Power Set	Power Set
661	Electronic Set	Electronic Set
662	Analog Set	Analog Set
663	Jazz Set	Jazz Set
664	Brush Set	Brush Set
665	Orchestra Set	Orchestra Set
666	SFX Set	SFX Set
667	Dance Set	Dance Set
668	Funk Set	Funk Set
669	Rock Set	Rock Set
670	Latin Set	Latin Set
671	Pop Set	Pop Set
672	Punk Set	Punk Set

Style List

No.	Full Name	LCD Name
8Beat & 16Beat		
1	8Beat Ballad	8Beat Ballad
2	8Beat Piano	8Beat Piano
3	8Beat 1	8Beat 1
4	Guitar Pop 1	Guitar Pop 1
5	8Beat Hip Hop	8Beat Hip Hop
6	8Beat Blues Rock	8Beat Blues Rock
7	8Beat Pop	8Beat Pop
8	Pop Funk 1	Pop Funk 1
9	Rhythm&Beat 1	Rhythm&Beat 1
10	8Beat Disco 1	8Beat Disco 1
11	8Beat Rock	8Beat Rock
12	Guitar Pop 2	Guitar Pop 2
13	8Beat 2	8Beat 2
14	Sweet Beat	Sweet Beat
15	8Beat Dance	8Beat Dance
16	8Beat Disco 2	8Beat Disco 2
17	Pop Funk 2	Pop Funk 2
18	8Beat 3	8Beat 3
19	60's 8Beat	60's 8Beat
20	Rhythm&Beat 2	Rhythm&Beat 2
21	16Beat 1	16Beat 1
22	16Beat Funk 1	16Beat Funk 1
23	16Beat Ballad 1	16Beat Ballad 1
24	16Beat R&B	16Beat R&B
25	Pop 16Beat 1	Pop 16Beat 1
26	16Beat Funk 2	16Beat Funk 2
27	16Beat Dance	16Beat Dance
28	Pop 16Beat 2	Pop 16Beat 2
29	16Beat 2	16Beat 2
30	Pop 16Beat 3	Pop 16Beat 3
31	Pop 16Beat 4	Pop 16Beat 4
32	Modern 16Beat	Modern 16Beat
33	16Beat Hot	16Beat Hot
34	16Beat Modern	16Beat Modern
35	16Beat Funk 3	16Beat Funk 3
36	16Beat 3	16Beat 3
37	Cool Beat	Cool Beat
38	16Beat Ballad 2	16Beat Ballad 2
39	16Beat 4	16Beat 4
40	Pop Shuffle	Pop Shuffle
Pop & Ballad		
41	Pop Rock 1	Pop Rock 1
42	Pop Dance 1	Pop Dance 1
43	Pop Fusion	Pop Fusion
44	Analog Night 1	Analog Night 1
45	6/8 Pop	6/8 Pop
46	Brit. Pop 1	Brit. Pop 1
47	Brit. Pop 2	Brit. Pop 2
48	Pop Hit	Pop Hit
49	Fusion Shuffle	Fusion Shuffle
50	Analog Night 2	Analog Night 2
51	Guitar Pop 3	Guitar Pop 3
52	Pop Beat	Pop Beat
53	Soft Beat	Soft Beat
54	60's Pop	60's Pop
55	Sting Latin	Sting Latin

56	R&B Ballad 1	R&B Ballad 1
57	Guitar Ballad	Guitar Ballad
58	Ballad Rock	Ballad Rock
59	Piano Pop 1	Piano Pop 1
60	Soft Ballad	Soft Ballad
61	Natural Ballad	Natural Ballad
62	Love Ballad	Love Ballad
63	Easy Ballad	Easy Ballad
64	Miami Folk	Miami Folk
65	Slow Ballad	Slow Ballad
66	Folk Ballad	Folk Ballad
67	Pop Ballad 1	Pop Ballad 1
68	Pop Ballad 2	Pop Ballad 2
69	EP Ballad	EP Ballad
70	New R&B Ballad	New R&B Ballad
Rock		
71	Rock	Rock
72	New Wave	New Wave
73	Ska	Ska
74	Pop Rock 2	Pop Rock 2
75	Slow Rock	Slow Rock
76	70's Rock&Roll	70's Rock&Roll
77	Folk Rock	Folk Rock
78	Soft Rock	Soft Rock
79	Old Rock	Old Rock
80	Easy Rock	Easy Rock
81	New Shuffle	New Shuffle
82	Rock Hip Hop	Rock Hip Hop
83	Rock&Roll 1	Rock&Roll 1
84	Rock Shuffle	Rock Shuffle
85	Rock&Roll 2	Rock&Roll 2
Ballroom		
86	Tango 1	Tango 1
87	Spain Matador	Spain Matador
88	Twist 1	Twist 1
89	Twist 2	Twist 2
90	Big Band Fox	Big Band Fox
91	Tango 2	Tango 2
92	Slow Fox	Slow Fox
93	Slow Waltz 1	Slow Waltz 1
94	Swing Fox	Swing Fox
95	Salsa 1	Salsa 1
96	Cha Cha 1	Cha Cha 1
97	Cha Cha 2	Cha Cha 2
98	Beguine 1	Beguine 1
99	Beguine 2	Beguine 2
100	Rumba 1	Rumba 1
101	Samba 1	Samba 1
102	Samba 2	Samba 2
103	Jive	Jive
104	Fox Trot	Fox Trot
Dance		
105	Techno 1	Techno 1
106	Hip Hop 1	Hip Hop 1
107	House 1	House 1
108	House 2	House 2
109	Pop Dance 2	Pop Dance 2
110	Down Beat	Down Beat

Style List

111	Techno 2	Techno 2
112	Progressive	Progressive
113	Rap 1	Rap 1
114	Rap 2	Rap 2
115	Disco	Disco
116	Soft Disco	Soft Disco
117	Disco Party	Disco Party
118	70's Disco	70's Disco
119	70's Disco Funk	70's Disco Funk
120	Club Dance	Club Dance
121	Euro Dance	Euro Dance
122	Hip Hop 2	Hip Hop 2
123	Garage	Garage
Soul & Funk		
124	Funk 1	Funk 1
125	Classic Funk	Classic Funk
126	Jay R&B	Jay R&B
127	Gospel Swing	Gospel Swing
128	Gospel	Gospel
129	Funk 2	Funk 2
130	Electric Funk	Electric Funk
131	Groove Funk	Groove Funk
132	Rubber Funk	Rubber Funk
133	Cool Funky	Cool Funky
134	Jazz Funk	Jazz Funk
135	Groove	Groove
136	Soul	Soul
137	Hip Hop Soul	Hip Hop Soul
138	Hip Hop Beat	Hip Hop Beat
139	R&B	R&B
140	Soul Beat	Soul Beat
141	R&B Ballad 2	R&B Ballad 2
142	British Soul Pop	British Soul Pop
Swing & Jazz		
143	Latin Jazz 1	Latin Jazz 1
144	Big Band	Big Band
145	Dixieland 1	Dixieland 1
146	Guitar Swing 1	Guitar Swing 1
147	Broadway Big Band	Broadway B.Band
148	Swing	Swing
149	Latin Jazz 2	Latin Jazz 2
150	Fusion	Fusion
151	Acid Jazz	Acid Jazz
152	Cool Jazz Ballad	Cool Jazz Ballad
153	Swing Shuffle	Swing Shuffle
154	Big Band Medium	Big Band Medium
155	Dixieland 2	Dixieland 2
156	Acoustic Jazz	Acoustic Jazz
157	Guitar Swing 2	Guitar Swing 2
158	Ragtime	Ragtime
159	Modern Jazz Ballad	Modern Jazz Ballad
160	Swing Ballad	Swing Ballad
161	Orchestra Swing	Orchestra Swing
Country		
162	Country Pop 1	Country Pop 1
163	Bluegrass 1	Bluegrass 1
164	8Beat Country	8Beat Country
165	Modern Country	Modern Country

166	Country Pop 2	Country Pop 2
167	Bluegrass 2	Bluegrass 2
168	2/4 Country	2/4 Country
169	Country Quick Steps	Country QuickStp
170	Country Folk	Country Folk
171	Country Shuffle	Country Shuffle
Latin & Latin Dance		
172	Samba 3	Samba 3
173	Bossa Nova	Bossa Nova
174	Latin	Latin
175	New Reggae	New Reggae
176	Reggae Dance	Reggae Dance
177	Paso Doble	Paso Doble
178	Lite Bossa	Lite Bossa
179	Latin Rock	Latin Rock
180	Beguine 3	Beguine 3
181	Slow Bolero	Slow Bolero
182	Disco Samba	Disco Samba
183	Mambo	Mambo
184	Meneito	Meneito
185	Rumba 2	Rumba 2
186	Rumba 3	Rumba 3
187	Tikitikita	Tikitikita
188	Lambada	Lambada
189	Pop Cha Cha 1	Pop Cha Cha 1
190	Pop Cha Cha 2	Pop Cha Cha 2
191	Salsa 2	Salsa 2
Waltz & Traditional		
192	Waltz	Waltz
193	Old Waltz	Old Waltz
194	English Waltz	English Waltz
195	German Waltz	German Waltz
196	Italian Mazurka	Italian Mazurka
197	Mexico Waltz	Mexico Waltz
198	Vienna Waltz	Vienna Waltz
199	Slow Waltz 2	Slow Waltz 2
200	Jazz Waltz	Jazz Waltz
201	Polka	Polka
202	6/8 March	6/8 March
203	German Polka	German Polka
204	Party Polka	Party Polka
205	Army March	Army March
206	March	March
207	US March	US March
208	Musette	Musette
209	French Musette	French Musette
210	Mazurka	Mazurka
World		
211	Enka Ballad	Enka Ballad
212	Laendler	Laendler
213	Hawaiian	Hawaiian
214	Sirtake	Sirtake
215	Dangdut	Dangdut
216	6/8 Flipper	6/8 Flipper
217	New Age	New Age
218	Tarantella	Tarantella

Style List

219	Scottish	Scottish
220	Norteno	Norteno
Pianist		
221	Pianist 1	Pianist 1
222	Pianist 2	Pianist 2
223	Pianist 3	Pianist 3
224	Jazz 1	Jazz 1
225	Jazz 2	Jazz 2
226	Jazz Pub	Jazz Pub
227	Piano Rock	Piano Rock
228	Pop Bossa	Pop Bossa
229	March 1	March 1
230	March 2	March 2
231	Piano Beat	Piano Beat
232	Piano Bar	Piano Bar
233	Blues	Blues
234	Pop Waltz	Pop Waltz
235	Slow Waltz	Slow Waltz
236	Ballad 1	Ballad 1
237	Ballad 2	Ballad 2
238	6/8 Ballad	6/8 Ballad
239	Pop 1	Pop 1
240	Pop 2	Pop 2

Song List

No.	Full Name	LCD Name
Folk & Country		
1	Red River Valley	Red River Valley
2	Troika	Troika
3	Oh! Susanna!	Oh! Susanna!
4	Wave Of The Danube	Wave of Danube
5	Long Long Ago	Long Long Ago
6	Old Folks at Home	Old Folks at Home
7	Jambalaya	Jambalaya
8	Ding! Dong! Merrily On High	Ding! Dong!
9	Battle Hymn Of The Republic	Battle Hymn
10	The Old Gray Mare	The Old Gray Mare
11	American Patrol	American Patrol
12	Christmas Is Coming	Christmas Coming
13	Sippin' Cider Through A Straw	Sipping Cider
14	Christmas Sound	Christmas Sound
15	On London Bridge	On London Bridge
Golden & POP		
16	House Of The Rising Sun	House of Rising
17	The Blue Bells Of Scotland	The Blue Bells
18	Beautiful Dreamer	Beautiful Dreamer
19	It's Been A Long, Long Time	Been a Long Time
20	O Sole Mio	O Sole Mio
21	Der Deitcher's Dog	Der Deitcher's Dog
22	Joy To The World	Joy to the World
23	Silent Night	Silent Night
24	Ave Maria	Ave Maria
25	Five Hundred Miles	Five Hundred Mil
26	Happy New Year	Happy New Year
27	It's Beginning To Look A Lot Like Christmas	Like Christmas
28	Jeanie With The Light Brown Hair	Jeanie
29	Music Box Dancer	Music Box Dancer
30	Go Tell It On The Mountain	Tell It on Mountain
31	Entertainer	Entertainer
32	Annie Laurie	Annie Laurie
33	Rumba Romance	Rumba Romance
34	The Last Rose Of Summer	Rose of Summer
35	The Old King Cole	The Old King Cole
Jazz & Fusion		
36	Samba In June	Samba In June
37	Funk	Funk
38	I Can...	I Can...
39	Sea Shore	Sea Shore
40	Guitar&Saxophone	Guitar&Saxophone
41	The Hip Hop's Night	HipHop's Night
42	Blue Lunch	Blue Lunch
43	Cobweb	Cobweb
44	Wine	Wine
45	Jazz Old Man	Jazz Old Man
46	Dark Eyes	Dark Eyes
47	Carlos	Carlos
48	Sad	Sad
49	The Jazz	The Jazz

Piano		
50	Fur Elise	Fur Elise
51	Prelude In C-Sharp Major	Prelude
52	Innocence	Innocence
53	The Happy Farmer	The Happy Farmer
54	L' Arabesque	L' Arabesque
55	Minuet In G Major (BWV Anh. 116)	Minuet in G 1
56	Austria Variation	Austria Variation
57	Schos Doll's Dance No. 7	Doll's Dance No. 7
58	The Rag-Time Dance	Rag-Time Dance
59	2-Part Invention In A Minor	Invention A 2 Voix
60	Minuet In G Major (BWV Anh. 114)	Minuet in G 2
61	Turkish March	Turkish March
62	Schos Doll's Dance No. 2	Doll's Dance No. 2
63	Italian Polka	Italian Polka
64	Musette In D Major	Musette in D
65	Bourree	Bourree
66	Piano Sonata In C Major, K.330. III	Sonata K.330. III
67	To A Wild Rose	To A Wild Rose
68	Away In A Manger	Away In A Manger
69	Gavotte I	Gavotte I
70	Angels We Have Heard On High	Angels We Heard
71	Waltz	Waltz
72	Did You Ever See A Lassie	Did You See Lassie
73	Chopsticks	Chopsticks
74	Four Swans' Dance	Four Swans' Dance
75	Old French Song	Old French Song
76	Inquietude	Inquietude
77	La Pastorale	La Pastorale
78	Santa Claus Is Coming To Town	Santa is Coming
79	Wilder Reiter	Wilder Reiter
80	Rialto Ripples (Rag)	Rialto Ripples
81	Mazurka	Mazurka
82	Tchaikovsky Waltz	Tchaikovsky Waltz
83	Salut d' Amour	Salut d' Amour
84	Gavotte	Gavotte
85	Neapolitan Song	Neapolitan Song
86	Minuet In D Major	Minuet in D
87	Prelude In E Major	Prelude in E
88	Barcarolle	Barcarole
89	Piano Sonata In A Major, K.331. I	Sonata K.331.I
90	Waltz For Piano In G-Sharp Minor	Waltz in G-Sharp

Demo List

No.	Full Name	LCD Name
1	Demo1	Demo1
2	Demo2	Demo2

Chord List

Chord Name	Abbreviation	Normal Voicing	Display for Root "C"
Major	M	1+3+5	C
Sixth	6	1+(3)+5+6	C6
Major seventh	M7	1+3+(5)+7	Cm7
Major seventh add sharp eleventh	M7(#11)	1+(2)+3+#4+5+7	CM7(#11)
Add ninth	(9)	1+2+3+5	C(9)
Major seventh ninth	M7(9)	1+2+3+(5)+7	CM7(9)
Sixth ninth	6(9)	1+2+3+(5)+6	C6(9)
Augmented	aug	1+3+#5	Caug
Seventh augmented	7aug	1+3+#5+b7	C7aug
Major seventh augmented	M7aug	1+(3)+#5+7	CM7aug
Minor	m	1+b3+5	Cm
Minor sixth	m6	1+b3+5+6	Cm6
Minor seventh	m7	1+b3+(5)+b7	Cm7
Minor seventh flatted fifth	m7b5	1+b3+b5+b7	Cm7b5
Minor add ninth	m(9)	1+2+b3+5	Cm(9)
Minor seventh ninth	m7(9)	1+2+b3+(5)+b7	Cm7(9)
Minor seventh eleventh	m7(11)	1+(2)+b3+4+5+(b7)	Cm7(11)
Minor major seventh	mM7	1+b3+(5)+7	CmM7
Minor major seventh ninth	mM7(9)	1+2+b3+(5)+7	CmM7(9)
Diminished	dim	1+b3+b5	Cdim
Diminished seventh	dim7	1+b3+b5+6	Cdim7
Seventh	7	1+3+(5)+b7	C7
Seventh suspended fourth	7sus4	1+4+5+b7	C7sus4
Seventh ninth	7(9)	1+2+3+(5)+b7	C7(9)
Seventh add sharp eleventh	7(#11)	1+(2)+3+#4+5+b7	C7(#11)
Seventh add thirteenth	7(13)	1+ 3+(5)+6+b7	C7(13)
Seventh flatted fifth	7b5	1+3+b5+b7	C7b5
Seventh flatted ninth	7(b9)	1+b2+3+(5)+b7	C7(b9)
Seventh add flatted thirteenth	7(b13)	1+3+5+b6+b7	C7(b13)
Seventh sharp ninth	7(#9)	1+#2+3+(5)+b7	C7(#9)
Suspended fourth	sus4	1+4+5	Csus4
One plus two plus five	sus2	1+2+5	C/Csus2


MIDI Implementation List

Function		Transmitted	Recognized	Remarks
Basic Channel	Default	1ch	ALL	
	Changed	1-16ch	1-16ch	
Mode	Default	x	3	
	Messages	x	x	
	Altered	*****	x	
Note Number	Note	0—127	0—127	
	:True voice	*****	0—127	
Velocity	Note on	○ 9nH,V=1-127	○ 9nH,V=1-127	
	Note off	x (9nH,V=0)	○(9nH,V=0; 8nH,V=0-127)	
After Touch	key's	x	x	
	Ch's	x	x	
Pitch Bend		○	○	
Control Change	0	○	○	Bank Select
	1	○	○	Modulation
	5	○	○	Portamento Time
	6	○	○	Data Entry
	7	○	○	Volume
	10	○	○	Pan
	11	○	○	Expression
	64	○	○	Sustain Pedal
	65	○	○	Portamento ON/OFF
	66	○	○	Sostenuto Pedal
	67	○	○	Soft Pedal
	80	x	○	Reverb Program
	81	x	○	Chorus Program
	91	○	○	Reverb Level
	93	○	○	Chorus Level
	120	x	○	All Sound Off
	121	x	○	Reset All Controllers
	123	○	○	All Notes Off
Program Change		○	○	
	:true	*****	0—127	
System Exclusive		○	○	
System Common	:SongPosition	x	x	
	:Song Select	x	x	
	:Tune	x	x	
System Real Time	:Clock	○	x	
	:Commands	○ *1	x	
Aux Messages	:LOCAL ON/OFF	x	x	
	:All Notes Off	○	○	
	:Active sense	x	○	
	:Reset	x	○	
Notes: *1 When the accompaniment is started, an FAH message is transmitted. When accompaniment is stopped, an FCH message is transmitted.				

- Mode 1: OMNI ON, POLY
- Mode 2: OMNI ON, MONO

- Mode 3: OMNI OFF, POLY
- Mode 4: OMNI OFF, MONO

 - : YES
- x: NO

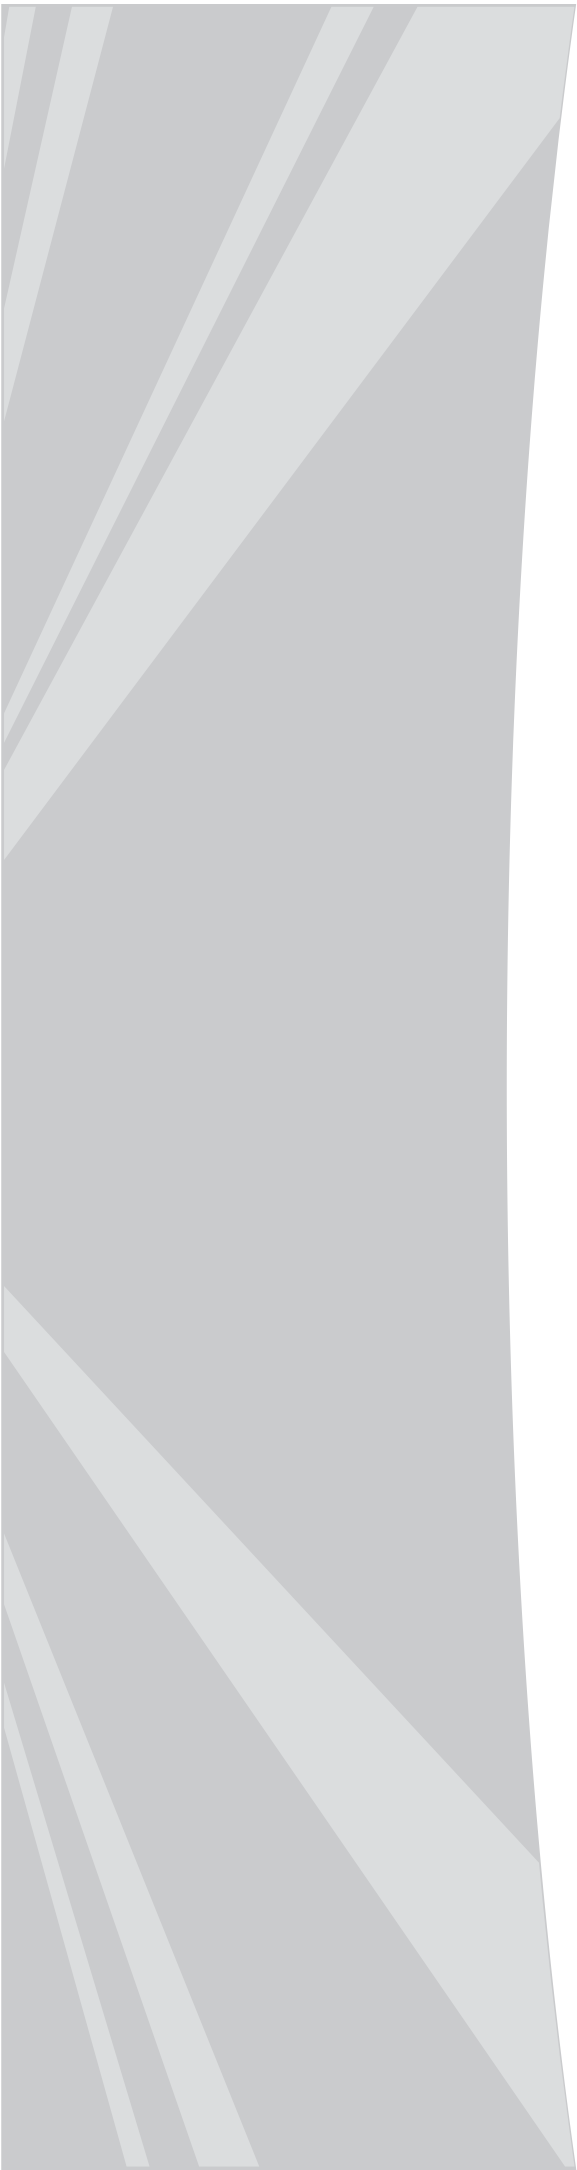

A1000_QuickStartGuide_G08

100
95
75
25
5
0