


Open the box and take out the U bend and the other four pipes.Loosen the four clamps on the bend and insert the two long pipes into the center two holes. Then, insert the two short pipes into the holes on

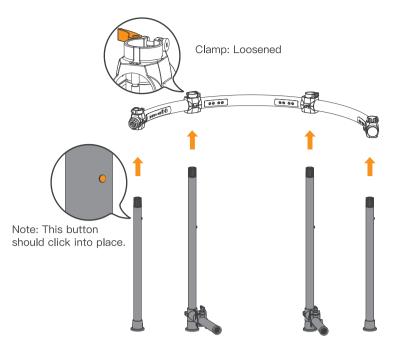


Put the drum clamps onto the two long pipes, and tighten the wing nuts.

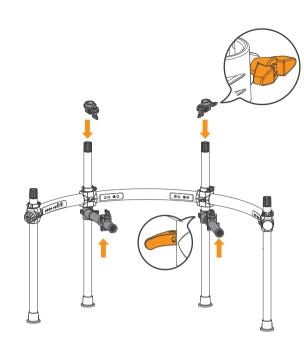

Put the smart holder onto the left long pipe, and tighten the wing nut.

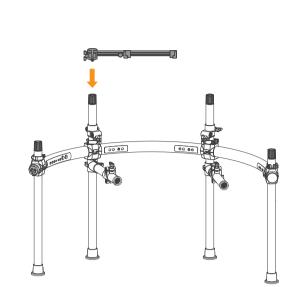


Loosen the turncap. Insert the cymbal arm into this cap as shown below, and then tighten the turncap.

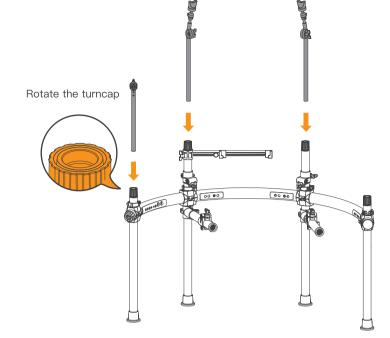


rod as shown below.

Install the L shaped HI-HAT rod and drum pad

Open the box, and take out the U bend and the other four pipes.Put the tom clamp onto the right short stand pipe as shown below.Loosen the four clamps on the bend and insert the two long pipes into the center two holes. Then, insert the two short pipes into the holes on either end.

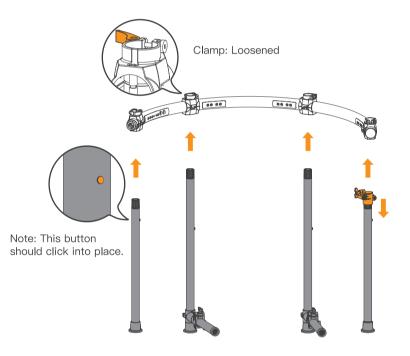


Put the drum clamps onto the two long pipes, and tighten the wing nuts.

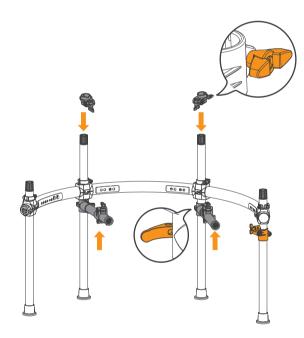


Put the smart holder onto the left long pipe, and tighten the wing nut.




Loosen the turncap. Insert the cymbal arm into this cap as shown below, and then tighten the turncap.

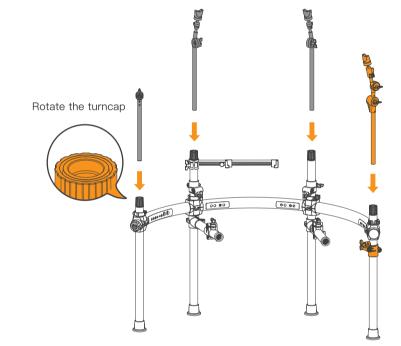

Install the L shaped HI-HAT rod and drum pad rod as shown below.

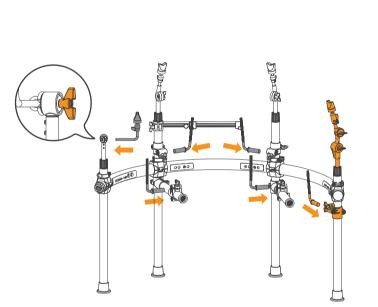



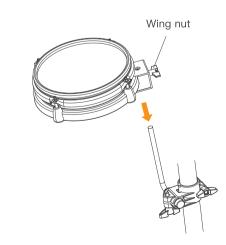

Loosen the wing nut and put the drum pad onto the L shaped pad rod. Then tighten the wing nut.

Note: We recommended installing the Snare and Tom3 first, and then Tom1 and Tom2.

